

# **August®**

## **User Manual**

— DA100C —



**10 INCH DIGITAL/ANALOGUE TV & MEDIA PLAYER**

**TV NUMERIQUE/ANALOGIQUE 10 POUCES & LECTEUR MEDIA**

**10 ZOLL DIGITAL/ANALOG TV & MEDIA PLAYER**

**TV DIGITALE/ANALOGICA & MEDIA PLAYER 10 POLLICI**

**TV DIGITAL/ANALGICA 10 PULGADAS & LECTOR MEDIA**

# User Manual

Thank you for buying our August TV. You may already be familiar with using a similar product but please take time to read these instructions carefully. It is designed to familiarise you with the product's many features and to ensure that you get the very best from your purchase.

## Safety

To ensure your safety and the safety of others, please ensure you read the Safety Instructions before you use this product.

## Disposal

Please ensure the product and its accessories are disposed in compliance with WEEE (Waste Electrical and Electronic Equipment) Directive and other regulations. Please check with your local authority for disposal regulations.

## Customer Service

If you need help, please contact our Customer Service:

Telephone: +44 (0) 845 250 0586

Email: [service@augustint.com](mailto:service@augustint.com)

# Quick Start Guide

## DA100C

1. When scanning for channels for the first time, it is suggested to use a rooftop aerial. If any channels are saved, the information will be saved to your TV and you can then switch to the portable antenna and change your location to find the best place to receive a signal.
2. Connect the device to the mains power then press power on the remote or press and hold the POWER button on the device for 1.5 seconds to switch the device on.

Pressing the MODE button on either the device or the remote switches between the following modes and settings: DTV (Digital Freeview TV & Media Player), ATV (Analogue TV), AV IN, BRIGHTNESS, CONTRAST, COLOR, SCALE (Aspect Ratio) and INVERT.

3. Switching the device on for the first time, the “Initial Install Screen” is displayed. Follow the on screen instructions to select your language and area then press enter. It will then ask whether you wish to install, select yes to begin the auto channel search. Once the search has completed, use CH+, CH- or EPG to select channels. Pressing the TV/R button switches between Freeview TV and radio modes.
4. If you have already completed the initial installation and need to rescan for additional Freeview channels or have moved to a different location and need to scan again, press MODE to select the Digital TV mode, then enter the menu using the MENU button. Choose “Digital TV” by pressing ENTER then select “Installation” then “Auto Search”. Pressing ENTER will start the search and save any channels found automatically.
5. To search for Analogue TV, press MODE repeatedly until it shows ATV, press LEFT or RIGHT to switch to the Analogue TV mode. Press MENU, it shows the ATV SETUP menu, set the TV FORMAT to “PAL I” for UK, then move to AUTO SEARCH, press ENTER to start the search.
6. To play video, music or photos from an SD card or USB stick, press MODE to select the Digital TV and Media Player mode, insert an SD card or USB stick into the card slot or USB port, then press MENU and select “Movie”, “Music” or “Photo”. Press ENTER or PLAY to begin playback, press MENU to stop playback and return to the main menu.

In Photo mode, UP applies a mirror effect, DOWN inverts the image, RIGHT rotates the image 90° clockwise, LEFT rotates the image 90° anticlockwise and ENTER begins a slideshow off all photos in the selected folder.







7. Please note that the signal strength in some areas may not be sufficient to support TV reception using a portable aerial. The distance from the closest transmitter and other factors such as surrounding buildings, the walls of your house, weather and electro-magnetic interference caused by power and telecommunication infrastructure may affect signal strength. Changing location may improve signal reception but a rooftop aerial designed for digital TV should be used to achieve the best possible reception.
8. For any further queries, please telephone August International Ltd helpline +44 (0) 845 250 0586 or email [service@augustint.com](mailto:service@augustint.com)

# Contents

<b>1. Safety Instructions</b>	1
<b>2. Accessories</b>	2
<b>3. Part Names and Functions</b>	3
<b>4. Connection</b>	6
<b>5. Basic Operation</b>	8
<b>6. Digital Freeview TV (DVB-T)</b>	9
<b>7. Digital TV Recording</b>	15
<b>8. Card Reader &amp; USB Functions</b>	16
<b>9. Games</b>	18
<b>10. Analogue TV (ATV)</b>	18
<b>11. Battery Compartment</b>	19
<b>12. Specifications</b>	21
<b>13. Troubleshooting</b>	22
<b>14. Warranty</b>	23



# 1. Safety Instructions

## 1.1 Storage and Use

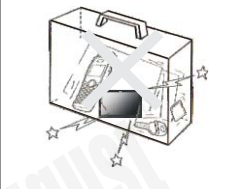	<p>Do not expose this device to extreme temperatures. Operating temperature range: 0°C to 50°C Storage temperature: -10°C to 60°C.</p>		<p>Keep this TV set away from water or damp environments.</p>
	<p>Never expose this TV set to moisture, dust, oil or smoke.</p>		<p>Never drop or expose this device to impact.</p>
	<p>Always secure this device during transport to avoid damage.</p>		<p>Never strike this TV set or scratch with sharp objects.</p>

## 1.2 Maintenance

Please unplug all connection wires before cleaning this machine.

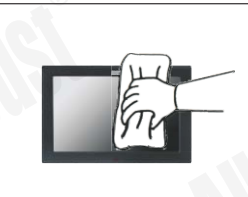	<p>Please wipe the display screen and buttons with a soft cloth. Only clean the screen with professional LCD TV screen cleanser.</p>		<p>Never wipe this machine with an abrasive cloth, detergent powder, alcohol and benzene etc. propellants or chemical cleaning products.</p>
---	--	---	--

## Operation Precautions

1. Use only the supplied power adaptor, failure to do so can damage the device and may cause personal injury.
2. When the device is not in use, turn off the AC adaptor or remove the car power adaptor from the 12V socket.

### ⚠ Warning

Do not watch this TV whilst driving.

### ⚠ Special Notice

There may be a few highlights or dark spots visible on the LCD screen. This is a very common property of active matrix display technology and does not indicate a defect or fault.


Never try to repair or modify this device yourself, this will invalidate the warranty, may cause further damage to the device and could cause personal injury. In the case of any fault, please turn off the device immediately and contact August International customer services or your retailer to arrange a professional repair.

## 2. Accessories

 <p>DA100C TV</p>	 <p>AC/DC adaptor</p>	 <p>Remote control</p>	 <p>Stand</p>
 <p>Telescopic antenna</p>	 <p>Digital TV antenna</p>	 <p>AV cable</p>	 <p>User manual</p>


### 3. Part Names and Functions

#### 3.1 Front

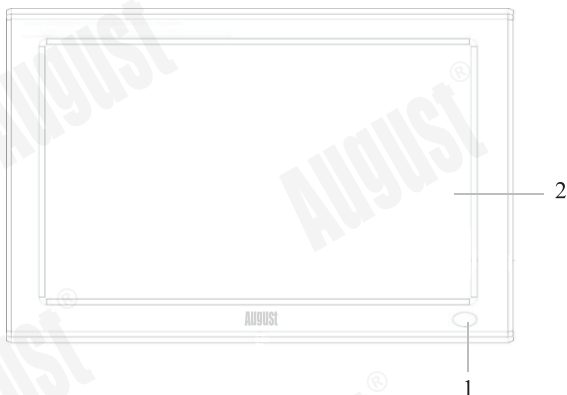

1. IR receiver window      2. LCD display

#### 3.2 Back

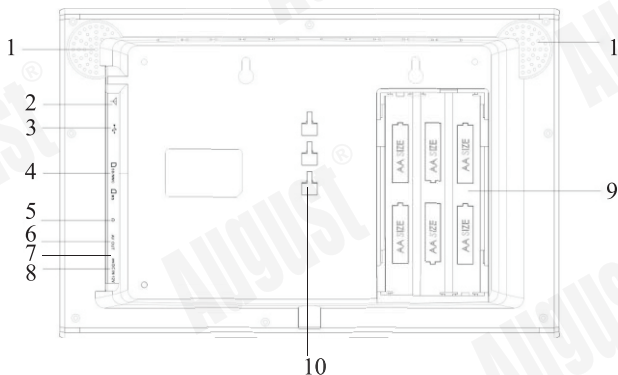


1. Speakers      6. AV in/out  
2. Antenna input      7. Standby power indicator  
3. USB port      8. 12V DC IN  
4. SD/MMC card slot      9. Battery compartment  
5. Headphone socket      10. Stand slot

#### \*Note:

The standby power indicator lights red when the device is in standby mode and connected to an external power source. When the device is switched on, the light turns off.



### 3.3 Top

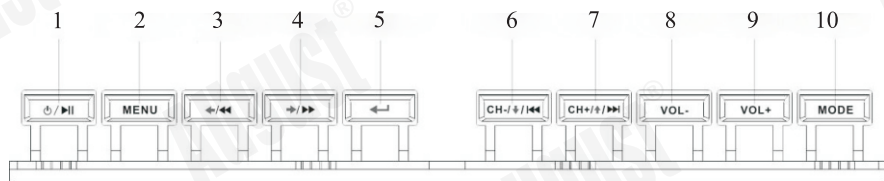

1. Power / Play / Pause / Resume
2. **MENU** Main Menu
3. Left / Reverse
4. Right / Forward
5. Enter/ Confirm
6. **CH-/↓/⏮** Channel Down/ Down/ Previous Track or Chapter
7. **CH+/↑/⏭** Channel Up/ Up / Next Track or Chapter
8. **VOL-** Volume Down
9. **VOL+** Volume Up
10. **MODE** Press repeatedly for mode switch. More details can be found on page 8

### 3.4 Remote Control

#### 3.4.1 Remote Button Functions



1. Power on / off
2. **MODE** Select mode
3. **TV/R** Select Digital TV or radio
4. **AUDIO** Select audio channel or audio language
5. **0-9** Numbers
6. **REC** Start or stop recording
7. **MENU** Main Menu
8. **VOL+** Volume Up
9. **VOL-** Volume Down
10. **MUTE** Mute and unmute the sound
11. Play / Pause / Resume
12. **MOVE** Move channels when using Channel Organizer
13. **LOCK** Set parental lock when using Channel Organizer
14. **FAV** Set favourite channels when using Channel Organizer Access favourite channels list whilst in TV or Radio mode
15. **ZOOM** Zoom in to a picture
16. **↑/CH+** Up / Channel Up

17. **▶▶** Next track or chapter
18. **◀◀** Previous track or chapter
19. **◀** Left / confirm or change settings in ATV mode
20. **ENTER** Confirm settings
21. **▶** Right / confirm or change settings in ATV mode
22. **CH-/▼** Down / Channel Down
23. **◀◀** Rewind in media player mode
24. **▶▶** Forward in media player mode
25. **S.TITLE** Switch subtitles on or off
26. **EPG** 7 day electronic program guide  
Use RIGHT, UP and DOWN to navigate today's program information.  
Use ▶▶ to view next day's program information, use ◀◀ to come back.
27. **INFO** Freeview channel information
28. **TTX** Freeview interactive teletext


### 3.4.2 Use of the Remote Control

Please remove the PVC packaging before using the remote control for the first time.

1. Do not expose the remote control to direct sunlight or very strong/bright light.
2. Do not drop or step on the remote control or subject it to shocks.
3. Keep the remote control away from extreme heat and humid environments.
4. Keep the remote control away from water.

#### Operating range


1. The IR range of the remote control is 5 meters.
2. The IR sensor on the remote control should be aimed directly at the sensor on the front of the device.  
It may not be possible to operate the device if there are obstacles between it and the remote control.
3. The receiving angle is  $\pm 30^\circ$ .

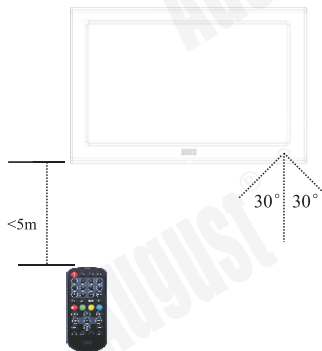


#### Replacing the battery

If the remote control does not function or if the operating range becomes reduced, replace the old battery with a new one.


Lithium battery(CR2025)

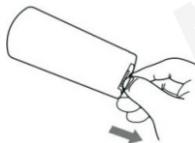

Pull out the battery holder and remove the old battery.

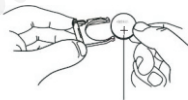

Insert the new battery into the battery holder with the + side facing upwards.

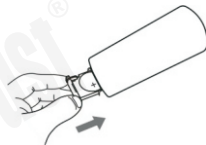

Replace the battery holder.


**\*Note:**

1. Please ensure proper disposal of used batteries.
2. To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control for a long period of time. If the battery leaks fluid, carefully wipe it out of the battery case, then insert a new lithium battery.

## 4. Connection


### 4.1 Connecting the power supply

1. Connect the DC output of the AC/DC power adaptor to the DC IN 12V socket.
2. Plug the power adaptor in to an AC power socket.

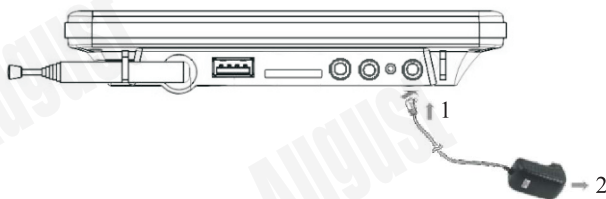

### 4.2 Connecting headphones

Connect your headphones to the headphone socket on the device.

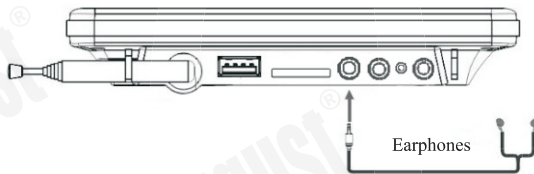

**\*Note:**


When headphones are connected to the device, no sound will be played through the devices speakers.

### Headphone and Earphone Safety

1. Listening through headphones or earphones at high volume for prolonged periods can cause damage to your hearing.
2. Please be considerate to others and use closed back headphones or listen at low volume whilst in public.
3. If you are experiencing tinnitus, stop using headphones or listen only at a very low volume.
4. Even at a low volume, prolonged periods of headphones or earphones use can cause damage to your hearing.

### 4.3 Connecting to a TV set via AV Output

Turn off all devices before connecting or disconnecting any cables.

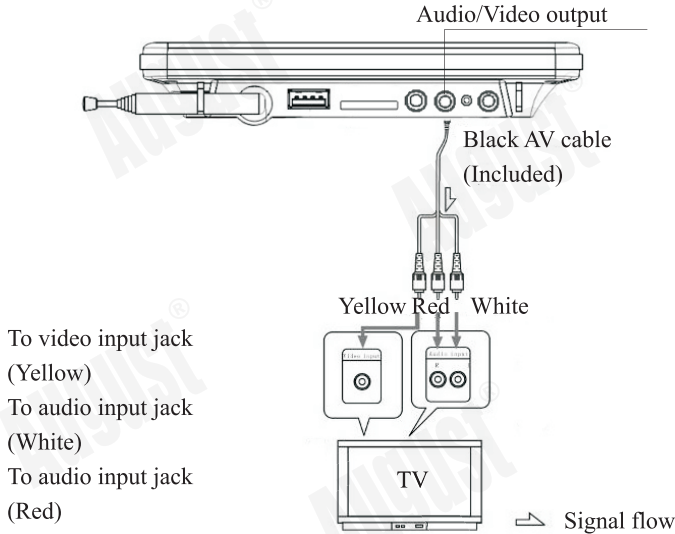


**\*Note:**

The AV output function is only available in Freeview (DVB-T) and Media player mode.

### 4.4 Connecting to an Audio/Video device via AV Input

Turn off all devices before connecting or disconnecting any cables.

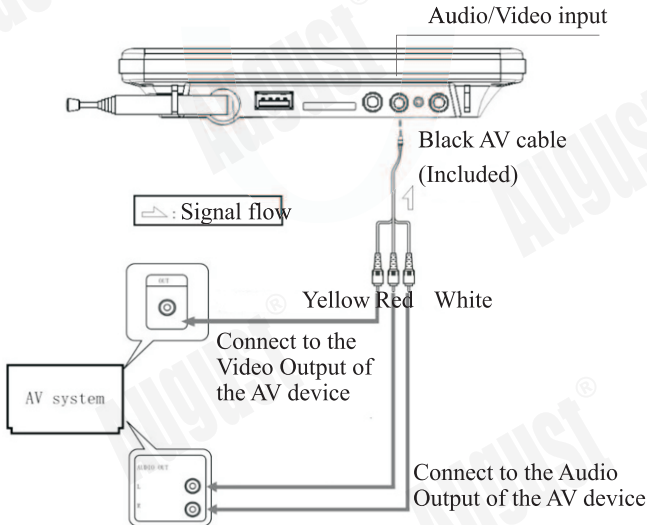

**\*Note:**

To use the AV IN function of this device, please set it to AV IN mode first.

## 5. Basic Operation

### 5.1 Switching the device off or on

#### 5.1.1 Switching on

Connect the device to mains power, then either press and hold the power button on the device for 1.5 seconds, or press the power button on the remote control to switch the device on.

#### 5.1.2 Switch Power Off

Either press and hold the power button on the device for 1.5 seconds, or press the power button on the remote control to switch the device off.

### 5.2 Mode settings

Press MODE repeatedly to select between the following modes:

DTV: Freeview TV & Media Player, press RIGHT to change

ATV: Analogue TV, press RIGHT to change

AV IN: AV input, press RIGHT to change

BRIGHTNESS: Press LEFT or RIGHT to change

CONTRAST: Press LEFT or RIGHT to change

COLOR: Press LEFT or RIGHT to change

SCALE: Press LEFT or RIGHT to change aspect ratio to 16:9 or 4:3

INVERT: Press LEFT or RIGHT to change the display to upside down or normal

## 6. Digital Freeview TV (DVB-T)

If the device is not set to the Digital TV mode, press MODE repeatedly until DTV appears on the screen, then press LEFT or RIGHT to confirm.



### 6.1 Channel Manager

Channel Manager allows the user to sort, edit, delete, and classify the channels.




In the Digital TV menu, select channel manager then press ENTER to access the submenus.



#### 6.1.1 Channel Organizer

Channel organizer is used to set favourite channels, change channel positions, lock and delete channels and edit a channel's name.

1. Channel Organizer can be accessed by selecting MENU -> Digital TV -> Channel Manager -> Channel Organizer.

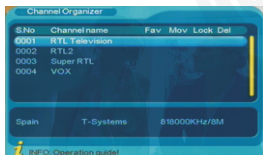

2. If there are no channels saved on the TV, Channel Organizer cannot be accessed, and "Channel not available" will be displayed.

3. Use UP/DOWN to select the channel you want to edit.
  - Press RED to delete or undelete a channel, it will ask you to enter the password, the system default password is 0000.
  - Press GREEN to add or remove a channel from favourites.
  - Press YELLOW to reposition a channel, use UP/DOWN to select the new position and press Enter to confirm.
  - Press BLUE to lock or unlock a channel, it will ask you to enter the password, the system default password is 0000.

4. To change a channel name, use UP/DOWN to highlight the channel, press LEFT/RIGHT to select, then use RED/GREEN/YELLOW/BLUE to edit the channel name.



5. Press MENU to exit Channel Organizer.

#### 6.1.2 Channel Sorting

Channel sorting allows the user to sort channels by area, alphabetically or by channel number.

1. Channel Sorting can be accessed by selecting MENU-> Digital TV->Channel Manager->Channel Sorting.



2. If there are no channels saved on the TV, Channel Sorting cannot be accessed and "Channel not available" will be displayed.


3. Press UP/DOWN to select:

① First Option: Sorting by area, press RIGHT to enter the area list, use UP/DOWN to select, press ENTER to confirm.

② Second Option: Sorting alphabetically or by channel number, press RIGHT to enter the option list, use UP/DOWN to select, press ENTER to confirm.

4. Sorting rules can be selected by pressing RIGHT/UP/DOWN/LEFT.

5. After sorting rules have been selected, press ENTER to confirm, it will ask "Are you sure?", select "Yes" to begin channel sorting or "No" to cancel.

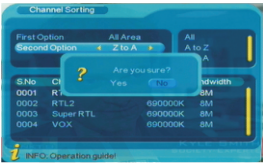

6. Press MENU to exit Channel Sorting.

### 6.1.3 Channel Grouping

Channel grouping allows the user to group channels into 8 categories: News, Science, Sports, Movie, Kids, Music, Fashion and None.

1. Channel Grouping can be accessed by selecting MENU-> Digital TV-> Channel Manager->Channel Grouping.



2. If there are no channels saved on the TV, Channel Grouping cannot be accessed and "Channel not available" will be displayed.


3. Use UP/DOWN to select the channel, and then select the category by pressing the numbers (1-8).

4. Press MENU to save. "Successfully updated" will display to confirm.

### 6.1.4 Edit Channels


Edit Channels allows the user to add and edit channels.

1. Edit Channels can be accessed by selecting MENU-> Digital TV->Channel Manager-> Edit Channels.

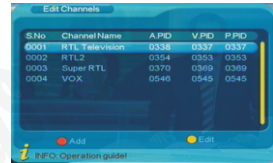

2. If there are no channels saved the Edit Channels window will open but be blank.

3. To add a new channel, press RED, and then press UP/DOWN to select between the 6 parameters as shown:

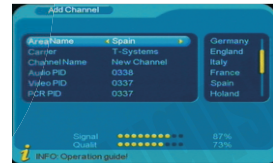

① Area Name: press RIGHT to enter the area list, use UP/DOWN to select, press ENTER to confirm.

② Carrier: press RIGHT to enter the carrier list, use UP/DOWN to select, press ENTER to confirm.


③ Channel Name: press RIGHT to enter the edit page, use RED/GREEN/YELLOW/BLUE to edit, press ENTER to confirm.

④ Audio PID: can be changed by pressing the numbers.

⑤ Video PID: can be changed by pressing the numbers.

- ⑥ PCR PID: can be changed by pressing the numbers.
- ⑦ Once all settings have been made, press ENTER to confirm. “Successfully Updated” will show before you are returned to Edit Channels.
- ⑧ During setup, press MENU at any time to cancel and exit to Edit Channels.


4. To edit a channel, press YELLOW, and then press UP/DOWN to select between the 4 options as shown:

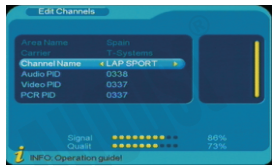


- ① Channel Name: press RIGHT to enter the edit page, use RED/GREEN/YELLOW/BLUE to edit, press ENTER to confirm.
- ② Audio PID: can be changed by pressing the numbers.
- ③ Video PID: can be changed by pressing the numbers.
- ④ PCR PID: can be changed by pressing the numbers.
- ⑤ all settings have been made, press ENTER to confirm. “Successfully Updated” will show before you are returned to Edit Channels.
- ⑥ During setup, press MENU at any time to cancel and exit to Edit Channels.

**6.1.5 Delete All**

To delete all the TV and Radio channels, select MENU-> Digital TV->Channel Manager-> Delete All.

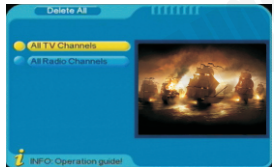

1. Use UP/DOWN to select TV channels and press ENTER. It will ask “Delete all TV channels?”, select “Yes” to confirm and delete all channels, select “No” to cancel.
2. Use UP/DOWN to select Radio channels and press ENTER. It will ask “Delete all Radio channels?”, select “Yes” to confirm and delete all channels and proceed the delete, select “No” to cancel.

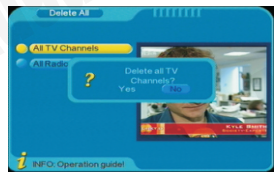

**6.2 Installation**

Installation allows you to search for additional channels and rescan for channels once you change location. To access installation select: MENU-> Digital TV-> Installation.




The installation menu has two options, Auto Search and Manual Search.



**6.2.1 Auto Search**

Select auto search, then press ENTER to begin searching.

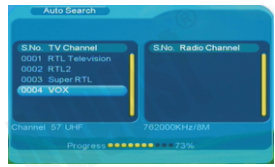


Once the search is completed, the system automatically saves all channel information and returns to the Installation menu.



## 6.2.2 Manual Search

If you know a channel's broadcasting frequency and bandwidth, using manual search to find the channel can be quicker.

Select Manual Search, press ENTER, it will ask you to provide two parameters:

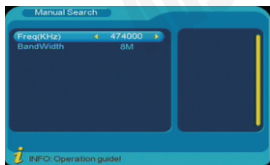


- ① Freq (KHz): scanning frequency, the default is 474000 KHz, use numbers or LEFT/RIGHT to change.
- ② Band Width: use LEFT/RIGHT to select.

After setting, press ENTER to start the search. After searching, the system will automatically exit the searching page, save program information and return to Installation menu, press MENU to exit.


## 6.3 Configuration

Configuration menu has the following options: On Screen Display, TV, System Setup, Time, Wakeup Timer and Parental Lock. It can be accessed by selecting MENU->Digital TV->Configuration.

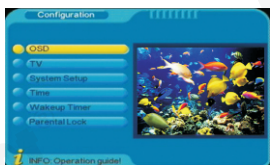


### 6.3.1 OSD (On Screen Display)

Through OSD, you can customise the on screen display.

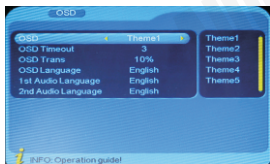

Use UP/DOWN to select the setting you wish to change.


- 1. OSD: supports 5 menu patterns, press LEFT/RIGHT to select between Theme1-5.
- 2. OSD Timeout: Sets the amount of time which an information window remains on screen. Press LEFT/RIGHT to select between 1-6 seconds. The system default is 3 seconds.
- 3. OSD Trans: Set the transparency of the OSD, press LEFT/RIGHT to adjust from 0%-60%.
- 4. OSD Language: Change the OSD language, press RIGHT to enter the language list, use UP/DOWN to select, press ENTER to confirm.

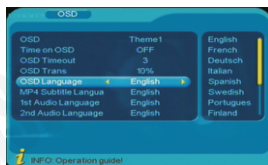

- 5. 1st Audio Language: press RIGHT to enter Audio Language list, use UP/DOWN to select, press ENTER to confirm.
- 6. 2nd Audio Language: press RIGHT to enter Audio Language list, use UP/DOWN to select, press ENTER to confirm.
- 7. After setting, press ENTER to confirm, press MENU to exit the setup, it will show "Successfully updated".

### 6.3.2 TV

Use UP/DOWN to select the setting you wish to change.

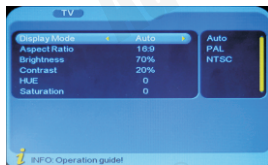


Left of the menu lists all the options. Press UP/DOWN to select an option.


- 1. Display Mode: press LEFT/RIGHT to select between AUTO, PAL & NTSC, press ENTER to confirm and exit the setting. Or press UP/DOWN to select another option.

2. Aspect Ratio: press LEFT/RIGHT to select between 16:9, 4:3 Pan Scan, 4:3 Letter Box, press ENTER to confirm and exit the setting. Or press UP/DOWN to select another option.


3. Brightness: press RIGHT to enter the list, use UP/DOWN to select, press ENTER to confirm, press ENTER again to exit the setting, or press UP/DOWN to select another option.

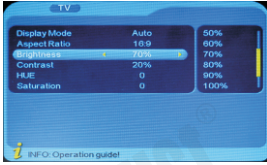


4. Contrast: press RIGHT to enter the list, use UP/DOWN to select, press ENTER to confirm, press ENTER again to exit the setting, or press UP/DOWN to select another option.

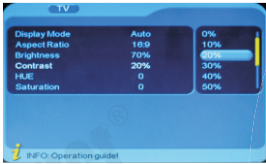

5. HUE: press RIGHT to enter the list, use UP/DOWN to select, press ENTER to confirm, press ENTER again to exit the setting, or press UP/DOWN to select another option.

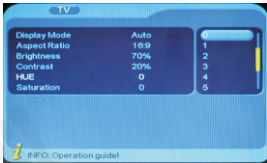


6. Saturation: press RIGHT to enter the list, use UP/DOWN to select, press ENTER to confirm, press ENTER again to exit the setting, or press UP/DOWN to select another option.

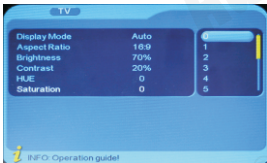

7. After setting, press ENTER to confirm, press MENU to exit the setup, it will show "Successfully updated".

### 6.3.3 System Setup

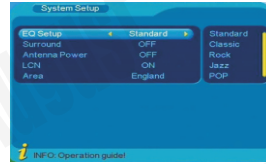


You can set EQ Setup, Surround, Antenna Power, LCN (Logical Channel Number) and Area in System Setup.

The device can output 5V power from the coaxial aerial socket. Select Antenna Power ON if your external aerial takes 5V input via its coaxial plug.


Press UP/DOWN to select an option, use LEFT/RIGHT to change the settings. After setting, press ENTER to confirm, press MENU to exit the setup, it will show "Successfully updated".

### 6.3.4 Time

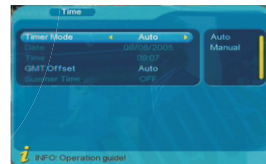


You can set Timer Mode, Date, Time, GMT Offset, and Summer Time under Time menu. There are two Timer modes, one is Auto, and one is Manual.

The system default is Auto timer mode, press UP/DOWN to select Timer Mode or GMT Offset, use RIGHT/LIFT to change.

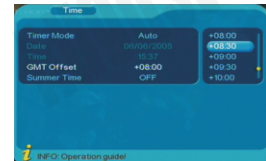

In Manual timer mode, press UP/DOWN to select an option, use RIGHT/LEFT or numbers to change the Date or Time. (GMT Offset and Summer Time options are greyed out and not available in Manual timer mode).

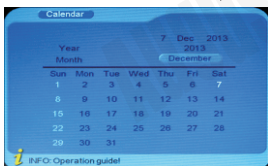

After setting, press ENTER to confirm, press MENU to exit the setup, it will show “Successfully updated”.


### 6.3.5 Wakeup Timer

This option allows you to switch the device on and off automatically, set a scheduled recording and set reminders for programs.




You can set Timer Mode, Wakeup Mode, Wakeup Message, Wakeup Channel, Wakeup Date, Time, Duration and Default Partition.

1. Timer No.: the number of this Wakeup Timer setting, use LEFT/RIGHT to change.
2. Timer Mode: use LEFT/RIGHT to select between Once, Daily, Weekly, Yearly or Off.

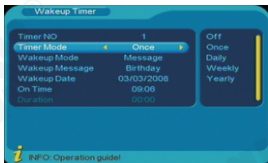

3. Wakeup Mode: use LEFT/RIGHT to choose to show a message, switch to a channel you want to watch, switch off/on the device or set a scheduled TV recording.

Please note, the wake up timer will only work on this device to turn it on automatically after it has been turned off using a timer.

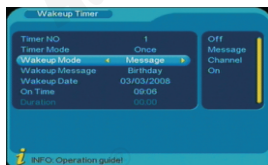

- ① Wakeup Message: use LEFT/RIGHT to select between Birthday, Anniversary or General.
- ② Wakeup Channel: use LEFT/RIGHT to select a channel from the channel list.
4. Wakeup Date: press RIGHT to enter the Calendar, use UP/DOWN/LEFT/RIGHT to select a date.
5. On Time: use numbers to set the starting time.
6. Duration: use numbers to set how long you want to watch or record the program.
7. Default Partition: this is for scheduled recording only, press RIGHT, it will show “Device List”, if the TV connects to an USB stick, it only shows one device on the list, if the TV connects to an external hard drive which has number of partitions, it will show the partition list, select the appropriate, press ENTER, it will ask to confirm whether to change, if you want to change, select “Yes” then press ENTER, otherwise select “No”. It will show “Set successfully”.


After setting, press ENTER to confirm, press MENU to exit the setup, it will show “Successfully updated”.

### 6.3.6 Parental Lock

User can change system password under this option.



Enter the old password, if it is correct, the cursor will move to Enter New Password option, enter and confirm the new password. The system will show "Password changed".

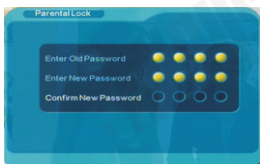

The system default password is 0000.

#### 6.4. Software Upgrade


This function is for manufacturer use only.

#### 6.5 Factory Default

To restore the system configuration to factory default, press MENU, select Digital TV-> Factory Default, press ENTER.




It will ask whether you want to perform the factory default, select [No] to cancel or select [Yes] to confirm.

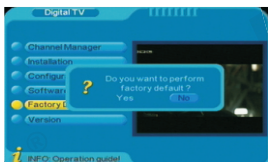

#### 6.6 Version

This provides the hardware, software and system information.

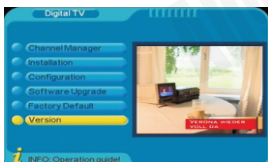

## 7. Digital TV Recording

The device supports recording Freeview TV to a USB memory stick or external hard drive (FAT32, USB2.0) via the USB port.

Before starting the recording, connect a USB stick or external hard drive, which has sufficient space left, to the device first.

### 7.1 Real Time TV Recording

Press REC on the remote to start the recording, it will show "REC" on the screen, press REC again to stop the recording, it will ask "Do you want to stop recording?", choose "Yes" to stop or "No" to carry on recording.

Press YELLOW during the recording, it allows you to set the duration of the recording, press RIGHT to choose: 15 min, 30 min, 45 min, 60 min, 75 min, 90 min, 105 min, 120 min or disable, press ENTER to confirm and exit.

Press INFO during a recording to display how long the device has been recording for, the channel name and the remaining space left on the USB storage device. Press INFO again to cancel.

The recorded program is saved in a new folder "PVR" in your USB stick or external hard drive and is in MPG video format. It can be viewed by pressing MENU then selecting Movie.

Press MENU, then select Disk Manger, it shows all the recorded programs stored in the USB stick or external hard drive, press GREEN repeatedly to select Play/Delete One/Delete All/Rename a recorded program, press ENTER to confirm, press MENU to exit at any time

### 7.2 Scheduled TV Recording

To set up a recording schedule, please make sure the device is on digital Freeview TV mode first. Then press MENU, select Digital TV by pressing ENTER, select Configuration, and then select Wakeup Timer. It shows the following options:

1. Timer No.: the number of this Wakeup Timer setting, use LEFT/RIGHT to change.
2. Timer Mode: use LEFT/RIGHT to select between Once, Daily, Weekly, Yearly or Off.
3. Wakeup Mode: select "Recorder" for scheduled recording, for the use of other available functions in this setting, please refer to page 18 in the user manual.
4. Wakeup Channel: use LEFT/RIGHT to select the channel you want to record.
5. Wakeup Date: press RIGHT to enter the Calendar, use UP/DOWN/LEFT/ RIGHT to select a date you want to record the program.
6. On Time: use numbers to set the starting time of the recording.
7. Duration: use numbers to set the duration of the recording.
8. Default Partition: press RIGHT, it will show "Device List", if the TV connects to an USB stick, it only shows one device on the list, if the TV connects to an external hard drive which has number of partitions, it will show the partition list, select the appropriate, press ENTER, it will ask to confirm whether to change, if you want to change, select "Yes" then press ENTER, otherwise select "No". It will show "Set successfully".
9. Press MENU to exit the setting, it will show "Successfully updated".

Please note the scheduled recording can only be activated when the device is ON and is in the Freeview TV mode.

When the recording starts, it will show "REC" on the screen, when it has finished, the "REC" will disappear. Press INFO during the recording, it will show the progress of the recording, the name of the channel, and how many space has left on your USB stick or external hard drive, press INFO again to exit.

The recorded program is saved in a new folder "PVR" in the USB stick or external hard drive and is in MPG video format. It can be viewed by pressing MENU then selecting Movie.

Press MENU, then select Disk Manger, it shows all the recorded programs stored in the USB stick or external hard drive, press GREEN repeatedly to select Play/Delete One/ Delete All/ Rename a recorded program, press ENTER to confirm, press MENU to exit at any time.


## 8. Card Reader & USB Functions

This player has built-in SD/MMC card reader and USB port. It supports the playback of MP3, JPEG and MPEG4 (AVI) files.


Insert a SD/MMC card or an USB memory stick to the card slot or USB port on the player.

### 8.1 Movie


Press MENU, select Movie, press ENTER, the Movie menu will show:

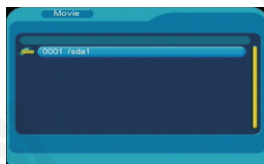


Use UP/DOWN to select a subtrack.

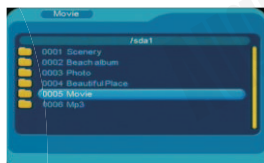

Press ENTER to view the video files in the subtrack.

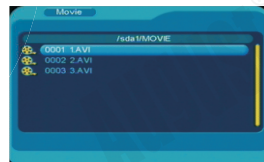

Use UP/DOWN to select a movie you want to watch, press ENTER to confirm.

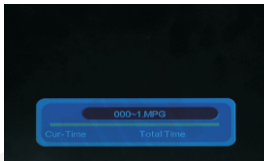

Press ► to search forward at 2, 4, 8 and 20 times of the normal speed.

Press ◀ to reverse at 2, 4, 8 and 20 times of the normal speed.

Press **⏮** to play the previous movie, press **⏭** for the next one.


Press **ZOOM** to zoom in or zoom out.

Press **LEFT** or **RIGHT** to move the picture.

Press **MENU** to stop at any time, press again to exit the playback.

## 8.2 Music


Press **MENU**, select Music, press **ENTER**, the Music menu will show:

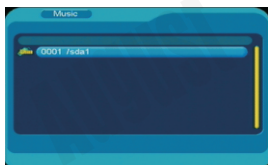

Use **UP/DOWN** to select a subtrack.



Press **ENTER** to view the music files in the subtrack.

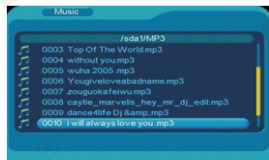

Use **UP/DOWN** to select a file you want to play, press **ENTER** to confirm.



Press **▶▶** to search forward at 2, 4, 8 or 20 times of the normal speed.


Press **◀◀** to reverse at 2, 4, 8 or 20 times of the normal speed.

Press **⏮** to play the previous music file, press **⏭** for the next one.

Press **MENU** to stop at any time, press again to exit the playback.

## 8.3 Photo

Press **MENU**, select Photo, press **ENTER**, the Photo menu will show:

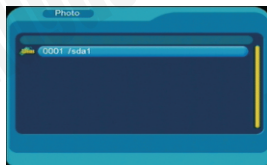

Use **UP/DOWN** to select a subtrack.



Press **ENTER** to view the photo files in the subtrack.



Use **UP/DOWN** to select a file you want to play, press **ENTER** to confirm.

Press **⏮** to play the previous photo.

Press **⏭** for the next one.

Press **ZOOM** to zoom in or zoom out.


Press **LEFT** or **RIGHT** to rotate the picture.

Press **ENTER** for photo slideshow, photos in the selected folder will show repeatedly.


Press **MENU** to stop at any time, press again to exit the playback.

## 9. Games

Games can be accessed by selecting Menu->Game-> Native Games.

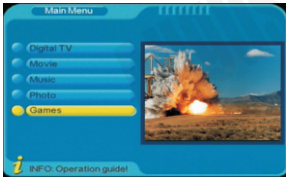

Press UP/DOWN to select the game you want to play, press ENTER to confirm. The games are played using UP/DOWN/LEFT/RIGHT buttons. To exit the game, press ENTER to pause, and then select Exit Game.

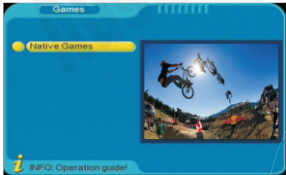

## 10. Analogue TV (ATV)

To search for Analogue TV, press MODE repeatedly until it shows ATV, press LEFT or RIGHT to switch to the Analogue TV mode.


Press MENU, the ATV SETUP menu will show as follows:



Use UP/DOWN to select the TV FORMAT, AUTO SEARCH, SKIP SWITCH, FINE TUNE, press ENTER to confirm, press MENU to exit at any time during the setting.

### 10.1 TV FORMAT

Use UP/DOWN to select the correct TV format for where you are, press ENTER to confirm.

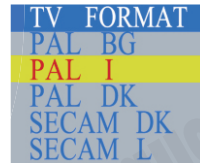

**\*Note:**

Set the TV FORMAT to “PAL I” for UK.

### 10.2 AUTO SEARCH

The device will search for programs automatically if selecting AUTO SEARCH. It will show as follows:

AUTO SCAN 112.2 Mhz CH 02  
VHF L

or

AUTO SCAN 175.2 MHz CH 08  
VHF H

or

AUTO SCAN 631.2 Mhz CH 53  
UHF

### 10.3 SKIP SWITCH

The SKIP SWITCH allows you to hide any channels, and they will be skipped when selecting channels using CH+ or CH-.

Move to the channel you want to skip, press MENU, then select SKIP SETUP, the following menu will show:



```
SKIP SETUP
SKIP OFF
SKIP ON
```


Use UP/DOWN to select SKIP ON, press ENTER to confirm, then press MENU to exit.

To turn the SKIP OFF for a channel, press the channel's number, press MENU, use UP/DOWN to select SKIP OFF, press ENTER to confirm, then press MENU to exit.

### 10.4 FINE TUNE

The device will tune the program finely if selecting FINE TUNE.

Use LEFT/RIGHT to tune, and the following will show:

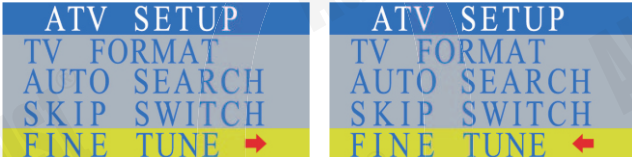

```
ATV SETUP
TV FORMAT
AUTO SEARCH
SKIP SWITCH
FINE TUNE →
```

```
ATV SETUP
TV FORMAT
AUTO SEARCH
SKIP SWITCH
FINE TUNE ←
```

#### \*Note:

If the signal is too weak, the image will remain poor whatever you do, and may output loud noise, shaking images and inferior sound etc., which is not the TV's fault. If the image remains poor when using the telescopic antenna, please try to use a roof top aerial or an amplified external antenna.

## 11. Battery Compartment

This device has got a built-in battery compartment which takes 6 pieces of AA 1.2V rechargeable batteries.

Fully charged batteries with 2700mAh capacity can support the TV watching and video playback for up to 2.5 hours. Higher duty batteries work longer.

The device will automatically charge batteries when connected to an external power source until fully charged.

Batteries may be charged by an external and separate charger (not supplied) before installed to the device and the charging time depends on the capacity of the charger used.



### Caution:

- Use AA 1.2V rechargeable batteries only. Use normal AA 1.5V batteries may cause permanent damage to the device and will invalidate the warranty.
- Have the batteries fully charged before the first time using them.
- The playback time may become shorter after the batteries are charged and discharged for a large number of times.
- Remove the batteries from the compartment if the device will not be used for an extended period of time.
- Dispose used batteries in compliance with WEEE and other government regulations.
- Do not throw batteries into fire. This can cause explosions.

#### 1) Open the battery compartment

Make sure the device is switched off and disconnected with the power lead. Slide to remove the battery compartment cover as shown below.



Press and slide out

#### 2) Place the batteries with “+” and “-“ poles in right direction as shown on the device.

#### 3) Replace the battery cover, slide and push it back.

## 12. Specifications

LCD Display	Screen size: 10.1 Inch Resolution: 1024 x 600 pixels Aspect Ratio: 16:9 Brightness: 170 cd/m <sup>2</sup> Contrast: 400:1
Decode Standard	DVB-T MPEG2
DVB-T Band Width	6, 7, 8 MHz
DVB-T Frequency	VHF: 177.5~226.5 MHz UHF: 474~858 MHz
Analogue TV Format	PAL-I , DK, BG SECAM-L, DK
Analogue TV Frequency	VHF: 48.25 ~ 160.25 MHz 168.25 ~ 456.25 MHz UHF: 464.25~863.25 MHz
AV In	System: PAL, NTSC, SECAM CVBS Input: 1.0Vp-p/75ohm Audio Input: 1Vrms~2Vrms
AV Out	CVBS Output: 1.0Vp-p/75ohm System: PAL, NTSC
Antenna Input	Impedance: 75ohm
Card Reader	Support SD/MMC card up to 8GB
USB Port	USB 2.0 host (5v, 800Am)
Built-in Speaker	2 x1W, 8 ohm
Power Adaptor	AC 100~240V 50~60 Hz DC 12V/1.5A
Battery Compartment	Watch TV for up to 1.5 hours with 6 x AA 1.2V 2700mAh rechargeable batteries
Power consumption	< 10 W
Dimensions	263x172x31mm
Net Weight	681g

### Media Formats

Video player	File Type	AVI(Audio-Video.Interleaved),MPG,ASF,VOB
	Video Type	MPEG1, MPEG2, MPEG4
	Audio Type	MPEG1/2, Layer 1/2/3, PCM, LPCM
	Audio bit Ratio	32Kbps ~ 320Kbps
	Resolution	Max. 720 x 480
	Frame Rate	Max. 30fps/25fps(PAL)

	Caption	DIVX(4.0, 5.0), XVID
Music player	File Type	MP3,WMA
	Bit Ratio	32Kbps~320Kbps
Photo viewer	File Type	JPG,JPEG(not include non--interlace)
	Resolution	Up to 4000 x 3000 pixels

### 13. Troubleshooting

Problems listed below do not necessarily signify a fault with the unit. Please check this list before requesting repairs.

Problems	Possible Causes and Solutions
No picture and no sound	Check the connection with the AC adaptor or car adaptor. Use of an unauthorized power supply. Press POWER on the remote to turn on the device, or press and hold POWER on the device for 1.5 seconds to turn it on.
No image	Check the channel selection. Scan for channels again. Always rescan for channels in new locations.
No sound	Check the sound volume. If you are using earphones, test them on another item. Check the earphone cable is plugged into the earphone socket on the device. Incorrect TV Format setting in Analogue TV mode. Set the device to factory default, then try again.
Picture freezing, and/or sound distorting	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
No signal	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
Dark Picture	Please adjust Brightness and/or Contrast settings.
Snowstorm	Motors/Trains/High Voltage Lines and Neon Lights may affect the signal.
Achromatic/Flashing/No Colour	Please adjust the Colour Setting. Incorrect TV Format setting in Analogue TV mode.

#### **Warning**

This user manual and instructions are intended for reference purposes only. No further notice will be given regarding modification of any information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

 **Warning**

No user serviceable components are fitted inside this TV. Do not attempt any repairs, as this will invalidate the warranty. Any repairs must be carried out by either the manufacturer or their nominated service centre. Parts inside this set are subject to high voltage.

## 14. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased
- The product must be correctly installed and operated in accordance with the instructions given in the user's manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main unit, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repairs. The manufacturer disclaims any liability for incidental or consequential damages.
- Please consult our customer service before returning any product; we are not responsible for any unexpected product returns.
- Any faulty products must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Please note:

1. A LCD display panel comprises a very large number of pixels and each pixel contains three sub-pixels - red, green and blue. Due to the complex manufacturing process, occasional pixel anomalies may occur. Pixel anomalies cannot be fixed or repaired and can happen at any stage in the LCD's life. August products should not be deemed as faulty if there are no more than three bright and dark pixels respectively.
2. Portable TV antennas included in the box are for people to watch Freeview TV in areas where the signal is very strong and there may be difficulties in receiving signal with the included portable antennas in some regions at present. This is due to the fact that Freeview is yet to operate in full power in the UK. August TVs should not be deemed as faulty if it can receive Freeview by connecting to a proper digital rooftop aerial.

### Customer Service:

Telephone: +44 (0) 845 250 0586

Email: [service@augustint.com](mailto:service@augustint.com)

August International Ltd  
United Kingdom  
Telephone: +44 (0) 845 250 0586  
[www.augustint.com](http://www.augustint.com)