

AUGUST®

August International Ltd
Rawmec Business Park
Hoddesdon EN11 0EE
United Kingdom
T: +44(0) 845 250 0586
(Carrier Rates Apply)
E: service@augustint.com

EU Distributor:
Daffodil Germany GmbH
Bayernstr. 10
D-30855 Langenhagen
Germany
T: +49 (0) 511 97812978

www.augustint.com

AUGUST®

User Manual

DA900D



- EN** 9" HD Digital / Analogue TV & Multimedia Player
- FR** TV HD 9" Digital / Analogique et Lecteur Multimédia
- DE** Digitaler/Analoges 9" HD TV & Multimedia Player
- IT** TV 9" HD Digitale / Analogico e Lettore Multimediale
- ES** TV HD 9" Digital / Analógico y Reproductor Multimedia
- PL** 9" Telewizor HD i Odtwarzacz Multimedialny
- RU** 9-дюймовый цифровой телевизор с мультимедийным проигрывателем

User Manual

Thank you for buying our August TV. Please take time to read these instructions carefully. It is designed to familiarise you with the product's many features and to ensure that you get the very best from your purchase.

Safety

To ensure your safety and the safety of others, please ensure you read the Safety Instructions before you use this product.

Disposal

Please ensure the product and its accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and other regulations. Please check with your local authority for disposal regulations.

Declaration of Conformity

The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

Customer Service

 
If you need help, please contact our Customer Service:

Telephone: +44 (0) 8452500586 (Carrier Rates Apply)

Email: service@augustint.com


1. Safety Instructions

■ Storage and Use

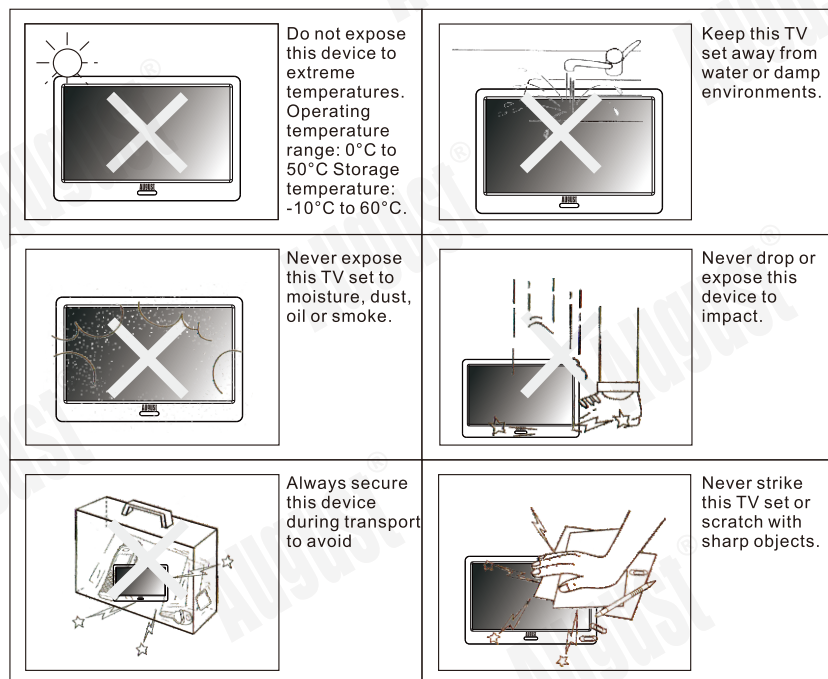

■ Maintenance

 Please unplug all connection wires before you starting cleaning this machine.

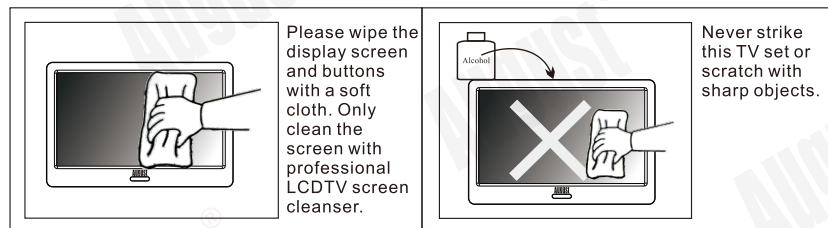

■ Precautions

1. Use only the supplied power adaptor, failure to do so can damage the device and may cause personal injury.
2. When the device is not in use, turn off the AC adaptor or remove the car power adaptor from the 12V socket.

⚠ Warning

Do not watch this TV whilst driving.

⚠ Special Notice

There may be a few highlights or dark spots visible on the LCD screen. This is a very common property of active matrix display technology and does not indicate a defect or fault.

Never try to repair or modify this device yourself. This will invalidate the warranty, may cause further damage, and could cause personal injury.


2. Main Features

- Portable HD Freeview TV
- USB PVR TV Recorder with Timeshift
- Multimedia Video and Music Player
- Supports DVB-T/T2 TV Boxes
- 7 Day EPG and Subtitles
- Battery Compartment
- USB2.0
- Mini HDMI Input

3. Box Contents

			
DA900D	AC/DC Adaptor	Remote Control	Stand
			
HDMI Cable	Digital TV Antenna	AV Cable	User Manual

 3.1 Interchangeable Plugs

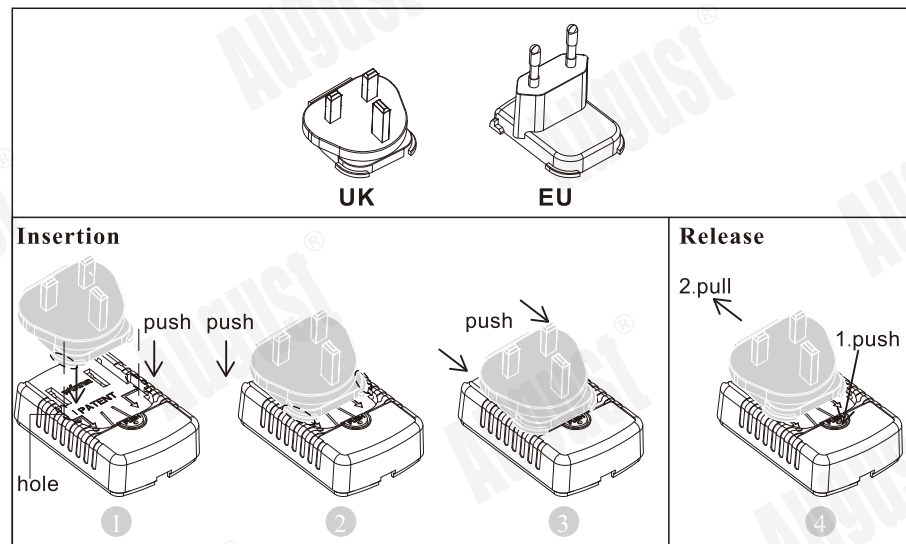

Quick Start Guide DA900D

1. Connect an antenna to the DA900D.
2. Plug the DA900D into a mains power socket using the supplied power adaptor.
3. Switch the DA900D on using the remote control.
4. Use the arrow buttons to select language.
5. Press <Enter> to confirm.
6. Use the arrow buttons to select country.
7. Press <Enter> to begin auto search.

Note: If you want to exit auto search, press <EXIT>, then Use <◀> or <▶> to select YES or NO.


Please note that signal strength in some areas may not be sufficient to support TV Reception using a Portable Aerial. The distance from the closest transmitter and other factors such as surrounding buildings and weather may affect signal strength. We advise that you scan for channels with a Rooftop Aerial when first using the product.

Contents

1. Safety Instructions	1
2. Main Features	2
3. Contents	3
4. Part Names and Functions	4
5. Connection and Setup	8
6. Startup	10
7. Digital TV	10
8. Analogue TV	13
9. Media Player	14
10. Display Settings	14
11. Audio Settings	15
12. Time Settings	15
13. System Settings	15
14. Battery Compartment	17
15. Specifications	18
16. Troubleshooting	19
17. Warranty	20


4. Part Names and Functions

 4.1 Front

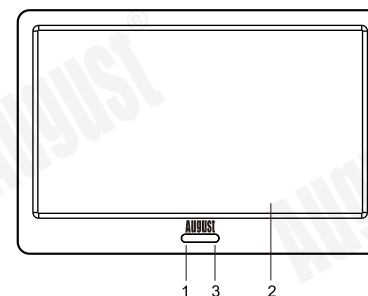

1. IR receiver window
2. LCD display
3. Power Indicator

 4.2 Back

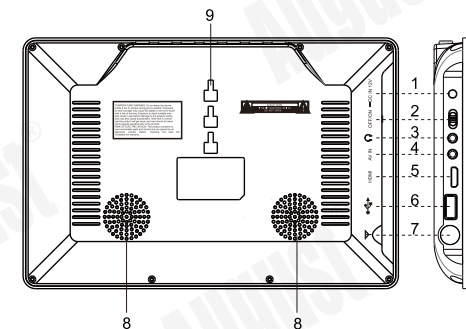


1. DC IN 12V
2. Power switch
3. Aux Out
4. AV In
5. Mini-HDMI In
6. USB Port
7. Antenna In
8. Speakers
9. Stand Slot

*NOTE:

The standby power indicator lights red when the device is in standby mode and connected to an external power source. When the device is switched on, the light will be green.

 
4.3 Key Function

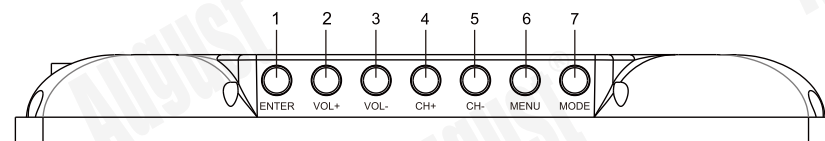

1. Enter/Confirm Power/Play/Pause
2. **VOL+** Volume Up Right
3. **VOL-** Volume Down Left
4. **CH+/>||** Channel Up/Up/Next Track or Chapter
5. **CH-/<||** Channel Down/Down/Previous Track or Chapter
6. **MENU** Main Menu
7. **MODE** Press to cycle through modes. Press <ENTER> to confirm

4.4 Remote Control

 4.4.1 Remote Button Functions

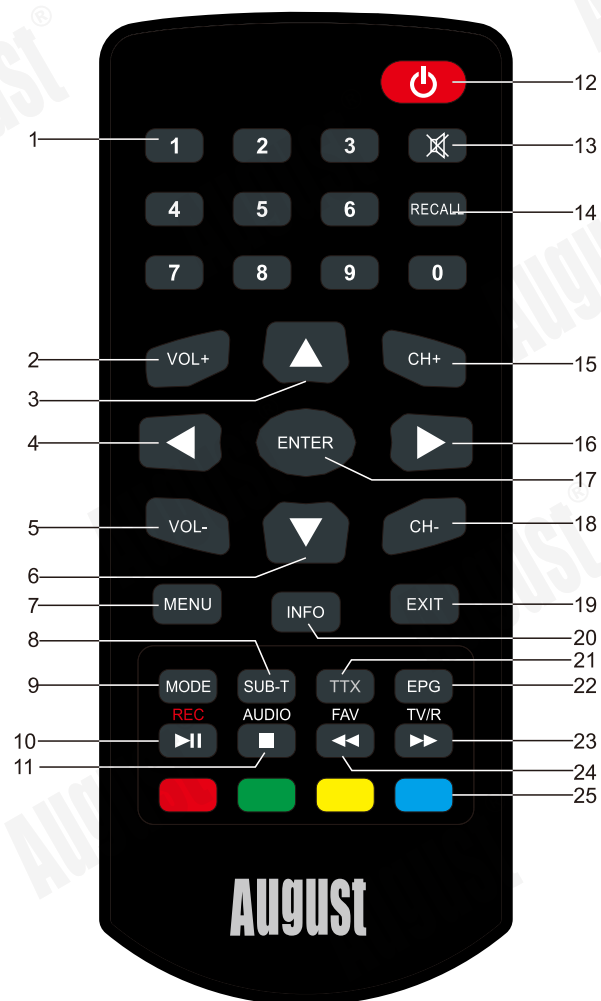

1	0~9	Numbers
2	VOL+	Volume Up
3	▲	Up
4	◀	LEFT
5	VOL-	Volume Down
6	▼	Down
7	MENU	Main Menu
8	SUB-T	Subtitle
9	MODE	Select mode
10	▶ or REC	Play or Pause / Start or stop recording
11	■ or AUDIO	Stop / Select audio channel or audio language
12	⏻	Power ON / OFF
13	ⓧ	Mute and unmute the sound
14	RECALL	Return the Preview Channel
15	CH+	Channel Up
16	▶	Right
17	ENTER	Confirm Settings
18	CH-	Channel Down
19	EXIT	Exit all settings
20	INFO	Freeview Channel information or Mode information
21	TTX	Freeview Interactive Teletext or Start and Stop MHEG-5
22	EPG	7 Days Electronic Program Guide
23	▶▶ or TV/R	Forward in media player mode / Change between TV and Radio mode
24	◀◀ or FAV	Rewind in media player mode / Favourite channel list or set favourite channels
25	Colour Buttons	Red, Green, Yellow, Blue Buttons

 
4.4.2 Use of the Remote Control

Please remove the PVC packaging before using the remote control for the first time.

1. Do not expose the remote control to direct sunlight or very strong / bright light.
2. Do not drop or step on the remote control or subject it to shocks.
3. Keep the remote control away from extreme heat and humid environments.
4. Keep the remote control away from water.


■ Operating range

1. The IR range of the remote control is 5 meters.
2. The IR sensor on the remote control should be aimed directly at the sensor on the front of the device. It may not be possible to operate the device if there are obstacles between it and the remote control.
3. The receiving angle is $\pm 30^\circ$.

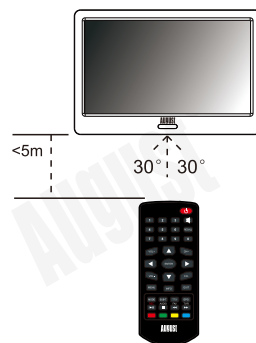

■ Replacing the battery

 If the remote control does not function or if the operating range becomes reduced, replace the old battery with a new one.

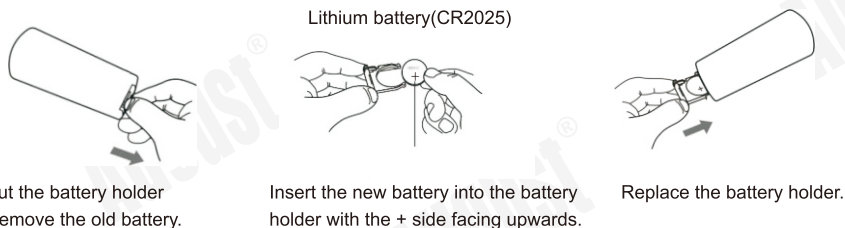


Warning: Please note the remote control contains button or coin cell battery. Hazardous if swallowed.

5. Connection and Setup


5.1 Connecting the power adaptor

 1. Connect the power adaptor to the DC IN 12V socket.
2. Plug the power adaptor into the mains power socket.

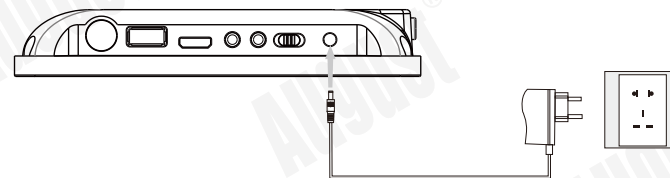

5.2 Connecting headphones

 Connect your headphones to the headphone socket.

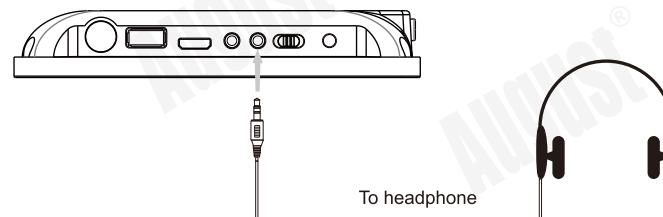

*Note:

 
When headphones are connected to the device, no sound will be played through the speakers.

Headphone and Earphone Safety

1. Listening through headphones or earphones at high volume for prolonged periods can cause damage to your hearing.
2. Please be considerate to others and use closed back headphones or listen at low volume whilst in public.
3. If you are experiencing tinnitus, stop using headphones or listen only at a very low volume.
4. Even at a low volume, prolonged use of headphones or earphones can cause damage to your hearing.


5.3 Connecting to a Source Device via HDMI

Switch off the DA900D and source device before connecting or disconnecting any cables.

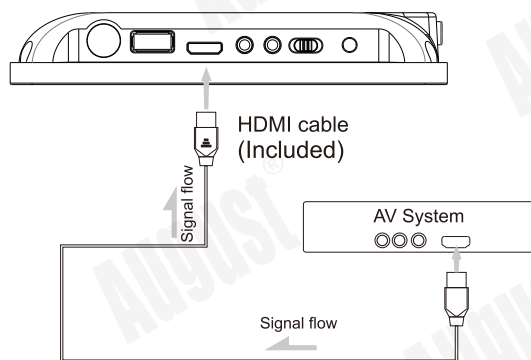

5.4 Connecting to a Source Device via AV

 Switch off the DA900D and source device before connecting or disconnecting any cables.

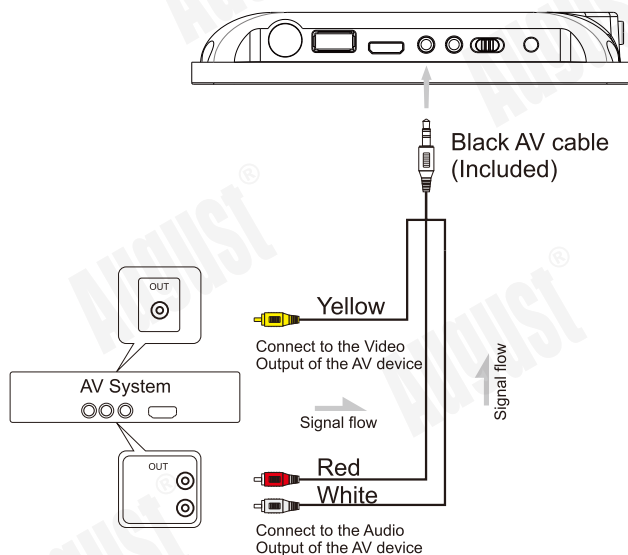

6. Start up

6.1 Switching the device off or on

6.1.1 Switching on

Connect the device to the mains and wait 5 seconds. Then either press and hold the power button on the device for 1.5 seconds, or press the power button on the remote control to switch the device on.

6.1.2 Switch Power Off

Either press and hold the power button on the device for 1.5 seconds, or press the power button on the remote control to switch the device off.

6.2 Mode settings

Press <MODE> repeatedly to select between the following modes:

 
DTV: Freeview TV, press <ENTER> to change

ATV: Analogue TV, press <ENTER> to change

HDMI: HDMI input, press <ENTER> to change

AV: AV input, press <ENTER> to change

Media Player: Media Player Mode, press <ENTER> to Switch it.

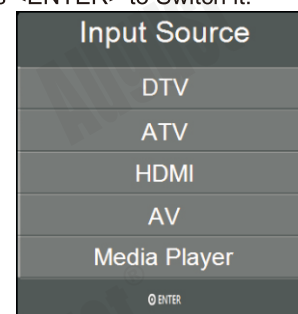


7. Digital TV

1. Connect an aerial to Antenna In.
2. Press <MODE>, then use <▲> or <▼> to select DTV.
3. Press <ENTER>.




7.1 DTV Auto Search:

 
1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'Country'.
4. Use <◀> and <▶> to change the country.

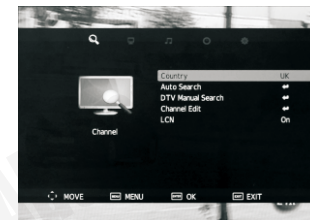

 
5. Use <▲> and <▼> to highlight 'Auto Search'.

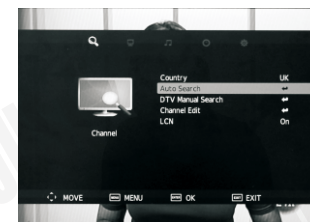

 6. Press <ENTER> to confirm.

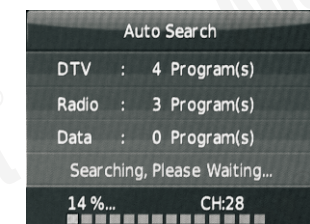


 Note: If you want to exit auto search, press <EXIT>, then Use <◀> or <▶> to select YES or NO.

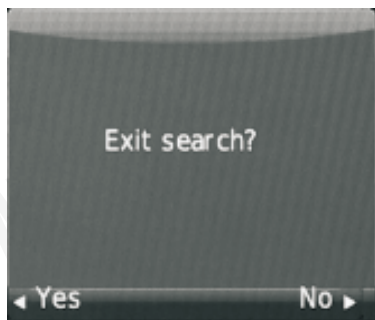


7.2 Blind Scan

 1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'Blind Scan'.

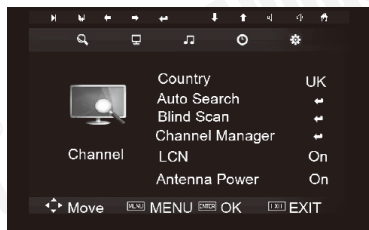

 
4. Press <ENTER> to confirm.

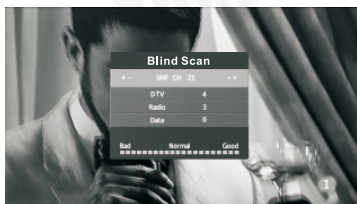

Note: The signal bar shows the signal quality. After a manual search, the DA900D plays new channels automatically.

7.3 DTV Channel Manager

 Channel Manager allows the user to delete, move, favorite and skip channels.

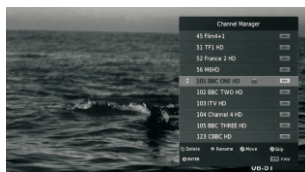

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight 'Channel Manager'.
4. Press <ENTER> to enter channel edit and use <▲> and <▼> to highlight to channel
5. Press 'RED' to delete a channel.
6. Press 'YELLOW' and use <▲> and <▼> to move a channel, press <ENTER> to confirm.
7. Press 'BLUE' to skip a channel.



8. Press <◀◀> or FAV> to add or remove a channel to or from your favorite list.

 


Press <MENU> to exit Channel Manager.

7.4 LCN (Logical Channel Number)


To switch LCN on or off:

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'LCN'.
4. Press <ENTER> to switch the LCN on or off.

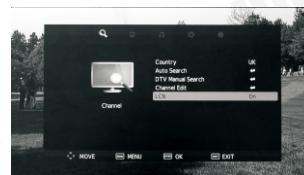

7.5 Channel Information

 Press <INFO> to view channel information:

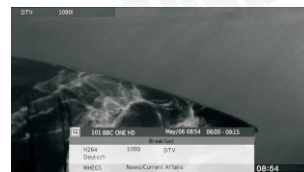

Press <INFO> again to show signal Strength and Quality:



 
7.6 Recall

Press <RECALL> to go back to the last watched channel.

7.7 Subtitles

Press <SUB-T> to set Subtitle for subtitle settings.

1. Use <▲> or <▼> to select a language or switch off subtitles.
2. Press <ENTER> to confirm.

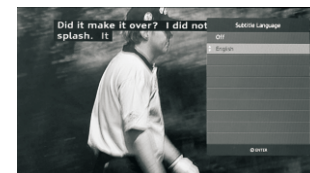


Primary and Secondary Subtitle Languages.

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'System'.
3. Use <▲> and <▼> to select 'Subtitle Language', press <ENTER> to enter.
4. Use <◀> and <▶> to change between your Primary and Secondary Subtitle language, use <▲> or <▼> to select one language, then press <MENU> to return.




7.8 Teletext

 Press <TTX> to access teletext or red button content, if available.

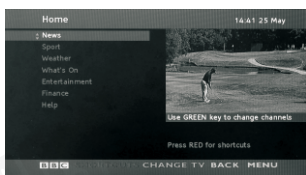

7.9 AUDIO Language

 1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'System'.
3. Use <▲> and <▼> to select 'Audio Language', press <ENTER> to enter.
4. Use <◀> and <▶> to select the Primary or Secondary audio language.
5. Use the arrow buttons to select a language then press <MENU> to return.

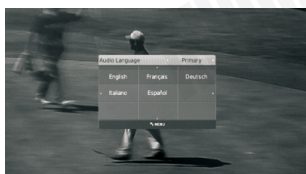

7.10 EPG (Electronic Program Guide)

Press <EPG> to access the EPG.



7.11 TV and Radio Modes

Press <▶▶> or TV/R> to switch between TV and Radio modes.

7.12 Record

Connect a USB storage device with sufficient free space for the intended recording, then press <▶▶|| or REC> to start recording.
Press <■> to stop recording.

7.13 Schedule Recording

1. Press <EPG> to access the EPG.
2. Use <◀> and <▶> to select the channel you wish to record.
3. Use <▲> and <▼> to select the desired program.
4. Press <RED> to enter the recording settings.
5. Press 'OK' to schedule the recording using the default time settings.

Note: To enter the date and time manually, change the mode from 'Auto' to 'Once', 'Everyday' or 'Weekly' then input the start time and the finish time.

7.14 Reminder

1. Press <EPG> to access the EPG.
2. Use <◀> and <▶> to select the desired channel.
3. Use <▲> and <▼> to select the program you wish to be reminded about.
4. Press <Blue> to enter the reminder settings.
5. Press OK to schedule the reminder using the default time settings.

Note: To set the reminder manually, use <▲> and <▼> to select the setting and use <◀> and <▶> to change the time.

 
8. Analogue TV

1. Connect an aerial to Antenna In.
2. Press <MODE>, then use <▲> or <▼> to select ATV.
3. Press <ENTER>.




8.1 ATV Auto Search

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'Country'.
4. Use <◀> and <▶> to change the country.
5. Use <▲> and <▼> to highlight 'Auto Search'.

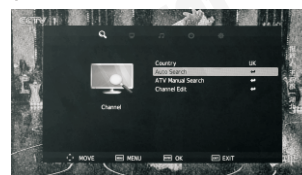

 6. Press <ENTER> to confirm.

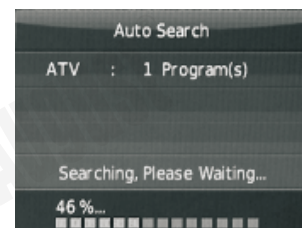


8.2 ATV Manual Search

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Channel'.
3. Use <▲> and <▼> to highlight the 'ATV Manual Search'.




 4. Press <ENTER> to enter manual search settings.
5. Use <▲> and <▼> to select options.
6. Use <◀> and <▶> to change or start search.

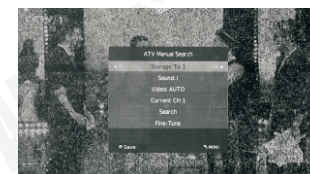


9. Media Player

 1. Connect a USB storage device
2. Press <MODE> and use <▲> and <▼> to select 'Media Player', press <ENTER> to confirm.
3. Use <◀> and <▶> to select a media format.

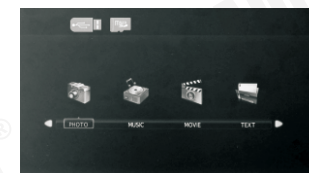

 4. Select USB SD and press <ENTER>.

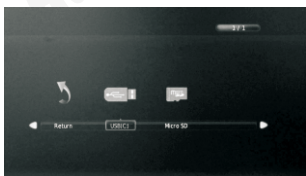

5. Use the arrow buttons to select a file and press <ENTER> to confirm.



10. Display Settings

You can adjust picture settings in any mode.

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Display'.
3. Use <▲> and <▼> to select options.
4. Use <◀> and <▶> to change the settings.
5. Press <MENU> to return.



11. Audio Settings

You can adjust audio settings in any mode.

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Audio'.
3. Use <▲> and <▼> to select options.
4. Use <◀> and <▶> to change the settings.
5. Press <MENU> to return.

 
 
 
 
 


12. Time Settings

You can change time settings in any mode.

1. Press <MENU> to enter the main menu.
2. Use <◀> and <▶> to select 'Time'.
3. Use <▲> and <▼> to select options.
4. Use <◀> and <▶> to change the settings.
5. Press <MENU> to return.

NOTE: In DTV the time is set automatically.

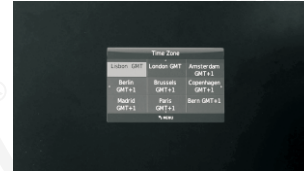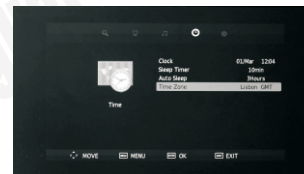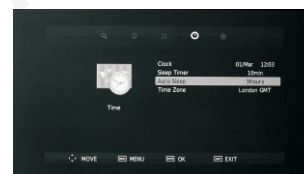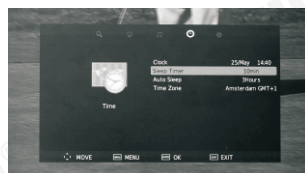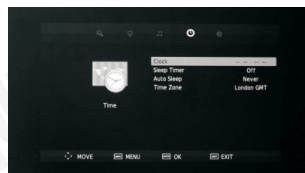


13. System Settings

You can set system settings in any mode.

1. Press <MENU> to enter main menu.
2. Use <◀> and <▶> to select 'System'.
3. Use <▲> and <▼> to select options.
4. Press <ENTER> or use <◀> and <▶> to change.



 NOTE: Audio and subtitle language settings are only available in DTV mode.

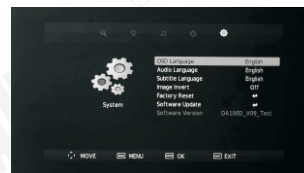

13.1 Factory Reset

To reset to factory settings select factory reset from the system menu then press <◀> to confirm or <▶> to cancel.



English

14. Battery Compartment

Fully charged 2400mAh batteries supports playback for up to 2.5~3 hours.
The device will automatically charge batteries when connected to an external power source.

Caution:

- Fully charge the batteries before first use.
- Built-in lithium battery is not removable.
- Dispose of any used batteries in compliance with WEEE and other government regulations.

15. Specifications

LCD Display	Screen size:9Inch Resolution:1024x600 pixels Aspect Ratio:16:9 Brightness:260cd/m2 Contrast:500:1
Digital TV Frequencies	VHF: 177.5~226.5MHz UHF: 474~858MHz
Decode Standard	DVB-T,DVB-T2
Video Decoding	H.265, H.264, MPEG4, MPEG2
DVB-T2 Band Width	6, 7, 8 MHz
Analogue TV Format	PAL-I , DK, BG SECAM-L, DK
Analogue TV Frequency	VHF: 48.25~160.25MHz 168.25~456.25MHz UHF: 464.25~863.25MHz
AV In	System: PAL, NTSC, SECAM CVBS Input: 1.0Vp-p/75ohm Audio Input: 1Vrms~2Vrms
Mini-HDMI In	HDMI 1.4a Resolution
Antenna Input	Impedance: 75ohm
USB Port	USB 2.0 host (5V,1000mA)
Built-in Speaker	2 x1.5W, 8 ohm
Power Adaptor	AC 100~240V 50/60Hz DC 12V/1.5A
Battery Compartment	Built-in lithium battery : 2400mAh
Power Consumption	< 18W
Dimensions	223x149x24.5mm
Net Weight	420g

Media Formats

Movie	Video Type	H.265, MPEG1、2、4、 DivX TS, MKV, TP, AVI, M2TS, VOB, DAT, MPG, MPEG, MOV
	Audio Type	MP3, WAV, MPEG-1 / 2 layer I / II, M4P, HE-AAC, COOK, Dolby
	Audio bit Ratio	32Kbps ~ 48Kbps
	Resolution	Max.1920x1080
	Frame Rate	Max. 30fps/25fps(PAL)
Music player	File Type	MPEG 1 / 2 layer 1、2、3, AC3,WAV,OGG
	Frame Rate	32Kbps~48Kbps
Photo viewer	File Type	JPEG/BMP/PNG
	Resolution	Up to 15360x8640

16. Troubleshooting

Problems listed below do not necessarily signify a fault with the unit. Please check this list before requesting repairs.

Problems	Possible Causes and Solutions
No picture or sound	Check the connection with the AC adaptor or car adaptor. Use of an unauthorized power supply. Press POWER on the remote to turn on the device, or press and hold POWER on the device for 1.5 seconds to turn it on.
No image	Check the channel selection. Scan for channels again. Always rescan for channels in new locations.
No sound	Check the sound volume. If you are using earphones, test them on another item. Check the earphone cable is plugged into the earphone socket on the device. Incorrect TV Format setting in Analogue TV mode. Set the device to factory default and then try again.
Picture freezing, and/or sound distorting	Signal may be too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
No signal	Please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
Dark Picture	Please adjust Brightness and/or Contrast settings.
Snowstorm	Motors/Trains/High Voltage Lines and Neon Lights may affect the signal.
Achromatic/Flashing/No Colour	Please adjust the Colour Settings. Incorrect TV Format setting in Analogue TV mode.

Warning

This user manual is intended for reference purposes only. No further notice will be given regarding modification of any information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

Warning

No user serviceable components are fitted inside this TV. Do not attempt any repairs, as this will invalidate the warranty. Any repairs must be carried out by either the manufacturer or their nominated service centre. Parts inside this set are subject to high voltage.

17. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased.
- The product must be correctly installed and operated in accordance to the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main units, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repairs. The manufacturer disclaim any liability for incidental or consequential damages.
- Please consult our customer adviser before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Please note:

1. A LCD display panel comprises a very large number of pixels and each pixel contains three sub-pixels - red, green and blue. Due to the complex manufacturing process, occasional pixel anomalies may occur. Pixel anomalies cannot be fixed or repaired and can happen at any stage in the LCD's life. August products should not be deemed as faulty if there are no more than three bright and dark pixels respectively.

Portable TV Antennas included in the Box are for people to watch Freeview TV in areas where signal is strong. There may be difficulties in receiving signal with these Antennas in areas with weaker signal. August TVs should not be deemed as faulty if it can receive Freeview by connecting to a Digital Rooftop Antenna.

Customer Service:

Telephone: +44 (0) 845 250 0586 (Carrier Rates Apply)
Email: service@augustint.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>.