

AUGUST®

User Manual

DVB425

AUGUST®



August International Ltd
United Kingdom
Tel: +44 (0) 845 250 0586
www.augustint.com

- EN** DVB-T2 HEVC TV Receiver and Multimedia Player
- FR** Récepteur TNT HD DVB-T2 HEVC avec Multimédia Player
- DE** DVB-T2 HEVC TV Receiver und Multimedia Player
- IT** Ricevitore TV DVB-T2 HEVC e Lettore Multimediale
- ES** Sintonizador TDT HD DVB-T2 HEVC y Reproductor Multimedia

User Manual

Thank you for purchasing the August DVB425 TV Receiver. You may already be familiar with using similar products but please take the time to read these instructions carefully. They are designed to familiarise you with the product's features and to ensure that you get the very best from your purchase.

Safety

Please read the safety instructions before using this product to ensure your safety and the safety of others.

Disposal

Please ensure the product and its accessories are disposed in compliance with WEEE (Waste Electrical and Electronic Equipment) Directive and any other applicable regulations. Please check with your local authority for current disposal regulations.

Declaration of Conformity

The Declaration of Conformity can be found on our website at <http://www.augustint.com/en/declaration/>

Customer Service



If you need help, please contact our customer service:

Telephone: +44 (0) 845 250 0586

Email: service@augustint.com

Quick Start Guide

DVB425

1. It is recommended that you use a rooftop aerial when searching for TV channels for the first time.
2. Connect the DVB425 to a TV or monitor using the provided HDMI cable or a SCART cable
3. Optionally, connect the DVB425 to a wired internet connection using an Ethernet cable.
4. Connect the DVB425 to the mains power and press the power button on the remote control or the box to switch on the device.
5. When you turn on the device for the first time, the Installation Guide will appear. Select the desired Country, OSD Language, Resolution and Aspect Ratio, then press **OK** to start the automatic channel scan. Once the search has finished, press **▲** or **▼** to select channels. Press **TV/RADIO** to switch between Freeview TV and Radio channels.
6. If you have performed the installation process before and would like to search for channels again, press **MENU** and go to  Channel Search, select Auto Search, then press **OK** to start a new search. Once the search has finished, press **▲** or **▼** to select channels. Press **TV/RADIO** to switch between Freeview TV and Radio channels.
7. To play music, photos, movies or PVR recordings from a USB storage device, insert the storage device into the USB port, press **MENU** and go to  Media Player. Choose between Music, Photo, Movie or PVR and press **OK** to view the file list. Then, select a file and press **OK** to Play.
8. Please note that the signal strength in some areas may not be sufficient to support TV reception using a portable aerial. The distance from the closest transmitter and other factors such as surrounding buildings, the walls of your house, weather and electromagnetic interference caused by power and telecommunication infrastructure may affect signal strength. Changing location may improve signal reception and a rooftop aerial designed for digital TV can be used to achieve the best possible reception.
9. For any further queries, please telephone the August International Ltd helpline on +44 (0) 845 250 0586 or email service@augustint.com







Contents

1. Safety Instructions	1
2. Main Features	2
3. Box Contents	2
4. Part Names and Functions	3
4.1 Front	3
4.2 Back	3
4.3 Remote Control	4
4.3.1 Remote Button Functions	4
4.3.2 Use of the Remote Control	5
5. Connection	6
6. Operation	7
6.1 Initial Installation	7
6.2 TV Mode (Quick access to functions)	7
6.2.1 Subtitle	7
6.2.2 Channel Information	7
6.2.3 Channel List	8
6.2.4 Teletext	8
6.2.5 Last Channel Watched	8
6.2.6 EPG	8
6.2.7 Timer	9
6.2.8 Live Recording	10
6.2.9 Time Shift	10
6.2.10 Audio	11
6.2.11 Colour buttons	11
6.2.12 Media Player from USB Storage	11
6.2.13 Recorded Programs	11
6.3 Radio Mode	12
6.4 Media player	12
6.4.1 Music	13
6.4.2 Photo Viewer	13
6.4.3 Video	14
6.4.4 PVR	14

7 Main Menu (detailed access to functions) -----	14
7.1 Channel-----	15
7.1.1 TV Channel Manager-----	15
7.1.2 Radio Channel Manager-----	15
7.1.3 Delete All-----	16
7.1.4 Channel Play Type-----	16
7.2 Channel Search -----	16
7.2.1 Auto Search-----	16
7.2.2 Manual Search-----	16
7.2.3 Aerial Power-----	17
7.2.4 Standby Loophthrough-----	17
7.2.5 LCN-----	17
7.3 System Setup -----	17
7.3.1 Language-----	18
7.3.2 TV System-----	18
7.3.3 Date/Time Settings-----	19
7.3.4 Timer Settings-----	19
7.3.5 Parental Lock-----	19
7.3.6 OSD Settings-----	20
7.3.7 Favourite -----	20
7.3.8 Multiview Settings-----	20
7.3.9 Auto Standby-----	21
7.4 Tools -----	21
7.4.1 Information-----	21
7.4.2 Factory Reset-----	21
7.4.3 Software Update-----	21
7.4.4 Remove USB Device Safely -----	22
7.5 Network -----	22
7.6 Media Player -----	23
7.6.1 USB Device Information-----	23
7.6.2 PVR Settings-----	23
8. Specifications -----	24
9. Troubleshooting -----	25
10. Warranty -----	27



1. Safety Instructions

Storage and Use

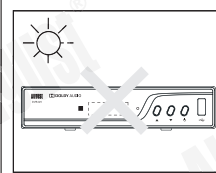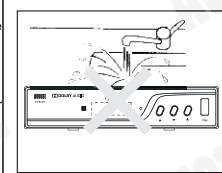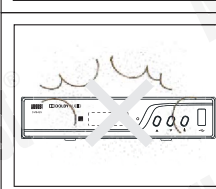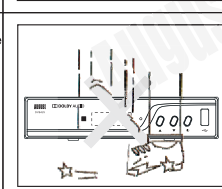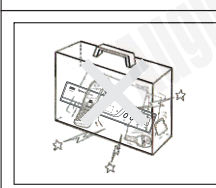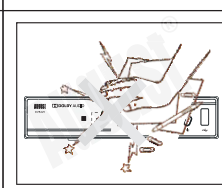	<p>Do not expose the device to hot or cold conditions. The working temperature of the device is 0°C-50°C. The storage temperature is -10°C - 60°C.</p>		<p>Keep the receiver away from water and damp environments.</p>
	<p>Do not expose the receiver to moisture, dust, oil or smoke.</p>		<p>Be careful to avoid dropping or striking the device.</p>
	<p>When transporting the device, store securely to avoid impact damage.</p>		<p>Do not touch the machine with sharp objects.</p>

Maintenance

Please unplug all external wires before cleaning the machine.

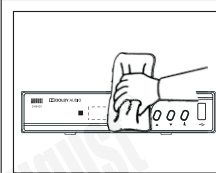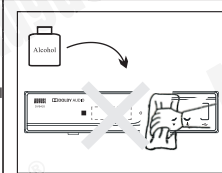	<p>Wipe the machine with a soft cloth. Only clean the screen with professional LCD TV screen cleanser.</p>		<p>Do not wipe the machine with an abrasive cloth, detergent, powder, alcohol, benzene or any propellants or chemical cleaning products.</p>
---	--	--	--

■ Precautions

For safety reasons, please switch off the receiver when not in use by pressing the power button.

Please ensure that the DVB425 is located so that it has adequate ventilation.

⚠ Special Notice

In the case of a fault with the DVB425, do not attempt to repair the device yourself. Turn off the receiver immediately and notify August or the seller from which you purchased the item. Any disassembly or modification may lead to further damage and will invalidate the warranty.


2. Main Features

- HD Freeview Set Top Box - Watch Free to Air Digital TV in HD quality
- PVR Style USB Recorder - Record TV programmes straight onto USB Media
- Coaxial Digital Output - Highest sound purity and quality
- Enjoy Digital Features - Record Function, Time Shift, EPG (Electronic Programme Guide)
- Max Resolution: 1080p - Video Output: HDMI / SCART - Audio Output: HDMI / SCART / Coaxial

3. Box Contents



DVB425

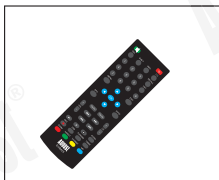

Remote Control



HDMI Cable




2 x AAA Batteries



User Manual


4. Part Names and Functions

4.1 Front

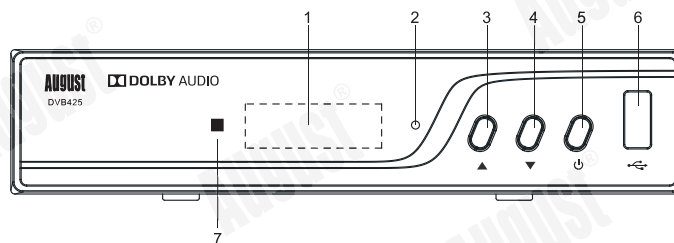

1. Display
2. Status LED
3. Up
4. Down
5. Power Button
6. USB Port
7. Remote Control Sensor


4.2 Back

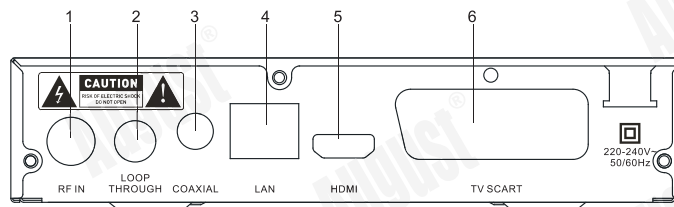

1. Antenna In
2. Antenna Out (Loop Through)
3. Coaxial Audio Out
4. LAN Port
5. HDMI Output
6. SCART Output

4.3 Remote Control

4.3.1 Remote Button Functions

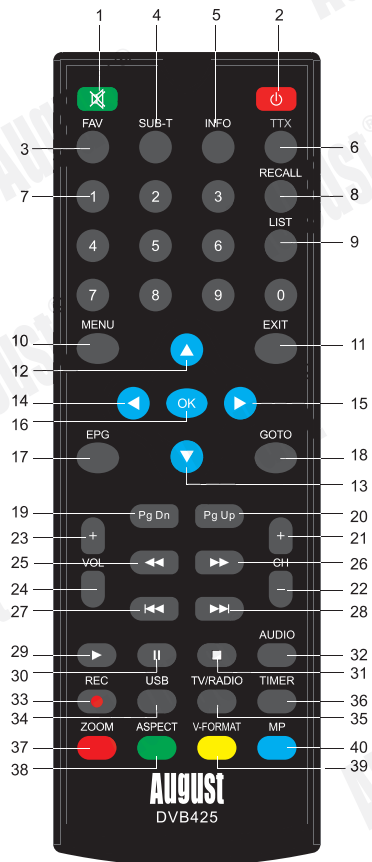

1. Mute / Unmute
2. Power
3. Favourite Channel List
4. Subtitle
5. Information
6. Teletext (not available in UK)
7. Numbers
8. Recall Last Channel Viewed
9. Recorded files
10. Main Menu
11. Exit
12. Up
13. Down
14. Left
15. Right
16. Confirm
17. Electronic Program Guide
18. Go To Function
19. Page Down
20. Page Up
21. Channel Up
22. Channel Down
23. Volume Up
24. Volume Down
25. Rewind
26. Forward
27. Previous Track
28. Next Track
29. Play
30. Pause
31. Stop
32. Audio Language
33. Record
34. USB Multimedia Player
35. TV / Radio
36. Timer
37. Zoom in
38. Aspect ratio
39. Resolution
40. MP


4.3.2 Use of the Remote Control

Please remove the PVC packaging before using the remote control for the first time.

1. Do not expose the remote control to direct sunlight or any other source of strong or bright light.
2. Be careful not to drop the remote control, step on it or subject it to shocks.
3. Do not expose the remote control to hot or humid conditions.
4. Keep the remote control away from water.

Operating range

1. The IR sensor on the remote control should be aimed directly at the sensor on the front of the DVB425. It may not be possible to operate the device if there are obstacles between it and the sensor on the remote control.
2. Use the remote control no further than 8 meters away from the sensor.
3. The receiving angle range should be $\pm 30^\circ$.

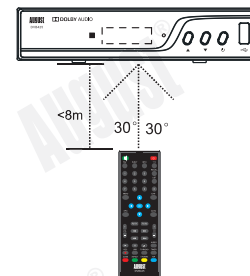

Replacing the Batteries

If the remote control does not function or if the operating range becomes reduced, replace the old battery with a new one.



Pull out the battery holder and remove the old battery.



Insert the new battery into the battery holder with the + side facing upwards.





Replace the battery holder.

*Note:

1. Please ensure the proper disposal of used batteries.
2. To prevent leakage of fluid from the lithium battery, remove the battery when the remote control will not be in use for a long period of time. If the battery leaks fluid, carefully wipe it out of the battery case, then change to a new lithium battery.


5. Connection

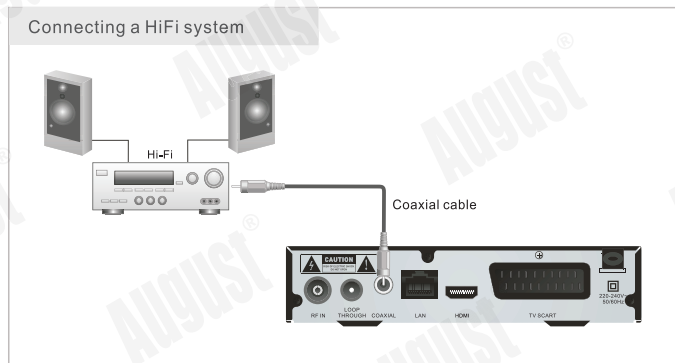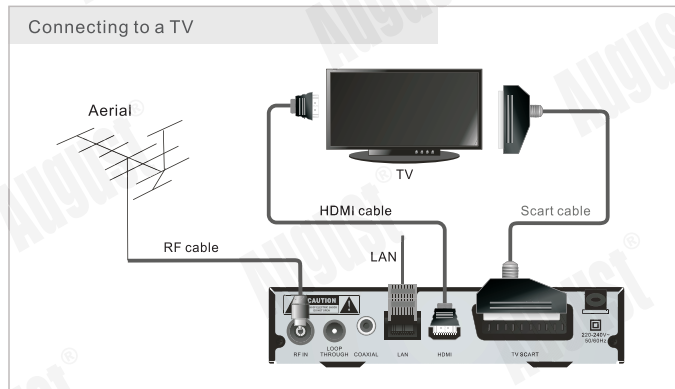

6. Operation

6.1 Initial Installation

When you first switch on the device, you will see an installation guide that allows you to set your preferences and search for channels.

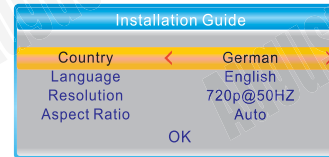

Use ▲ or ▼ to navigate between settings and use ◀ or ▶ to adjust the selected setting.

1. Select the desired *Country*.
 2. Select the desired *Language*.
 3. Navigate to *Resolution* and press **OK** to enter the resolution settings menu. Select the desired resolution, then press **OK** to confirm.
 4. Select *Yes* from the pop-up window to save the settings or *No* to cancel.
 5. Select the desired *Aspect Ratio*.
 6. Select *OK*, then press **OK** to start the Auto Channel Search. After the search has finished, you can start watching any channels which have been found.
- Press **TV/RADIO** to switch between Freeview TV and Radio channels. If no channels are found, the device will return to the installation guide.

6.2 TV Mode (Quick access to functions)

This section will explain how to access functions quickly using the remote control when watching TV.

6.2.1 Subtitle


1. Press the **SUB-T** button.



2. Use ▲ and ▼ to select the subtitle language or select *OFF* to disable subtitles.
3. Press **OK** to confirm or press **EXIT** to cancel.

6.2.2 Channel Information


1. Press **INFO** to show information about the current and next programs.

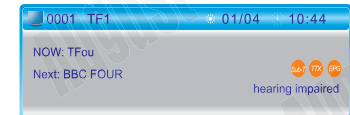

2. Press **INFO** again to show more detailed information.



3. Press **INFO** once more to display channel information such as frequency, signal strength and signal quality.

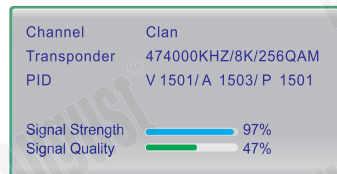

4. Press **EXIT** at any time to close the information window.

6.2.3 Channel List

1. Press **OK** to view the channel list.
2. Use **▲** or **▼** to navigate between channels and press **OK** to begin watching the selected channel. Press **Pg Up** or **Pg Dn** to move to the previous or next page respectively.
3. Press **EXIT** to close the channel list.

6.2.4 Teletext

Press **TTX** to access the teletext service.



Note: Not all channels support teletext.

6.2.5 Last Channel Watched

Press **RECALL** to return to the last channel that was being watched.

6.2.6 EPG

The EPG (Electronic Program Guide) is the schedule of programs due to be broadcasted in the next 7 days.

1. Press **EPG** to open the EPG page.



2. Use **▲** and **▼** to navigate between channels and use **◀** and **▶** to navigate through the scheduled programs.
3. Press **OK** to view more detailed information about the selected program.
4. Press **ZOOM** to enable the following enhanced navigation options. Press **<EXIT>** to return.

Select '**◀**' and '**▶**' to navigate through programs one by one. Select '**◀◀**' and '**▶▶**' to navigate through programs by steps of 2 hours. Select '**◀◀◀**' and '**▶▶▶**' to navigate through programs by steps of 24 hours.


Note: Not all channels support EPG.

6.2.7 Timer

- Schedule Viewing

To add a timer for a scheduled viewing, press **TIMER** or **EPG**, then **ASPECT** when watching TV.

Use **▲** or **▼** to navigate between settings and use **◀** or **▶** to adjust the selected setting.

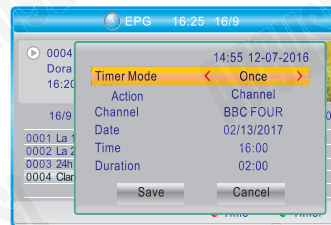


1. Select the desired Timer Mode: *Off*, *Once*, *Daily*, *Weekly* or *Monthly*.
2. For Action, select *View*.

Tips: When creating a timer from the EPG, the program time, date and duration will be set automatically according to information transmitted by the broadcaster. Should you wish to change these settings:

1. Select the desired *Channel*.
2. Input the *Date* by using the keypad numbers.
3. Input the *Time* by using the keypad numbers (time format: hh/mm)
4. Input the *Duration* by using the keypad numbers (time format: hh/mm). *Duration* is the period for which the selected channel will be recorded.
5. Select *Save* and press **OK** to confirm or select *Cancel* and press **OK** to cancel.

- Schedule Recording

To add a timer for a scheduled recording, press **TIMER** or **EPG**, then **ASPECT** when watching TV.

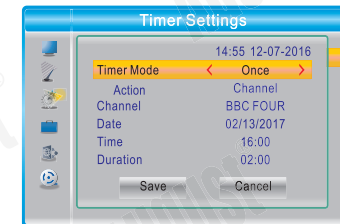

Use **▲** or **▼** to navigate between settings and use **◀** or **▶** to adjust the selected setting.

1. Select the desired Timer Mode: *Off*, *Once*, *Daily*, *Weekly* or *Monthly*.
2. For Action, select *Record*.

Note: When selecting *Record*, ensure that a USB storage device with sufficient free space is inserted in the USB port.

Tips: When creating a timer from the EPG, the program time, date and duration will be set automatically according to information transmitted by the broadcaster. Should you wish to change these settings:


1. Select the desired *Channel*.
2. Input the *Date* by using the keypad numbers.
3. Input the *Time* by using the keypad numbers (time format: hh/mm).
4. Input the *Duration* by using the keypad numbers (time format: hh/mm). *Duration* is the period for which the selected channel will be recorded.
5. Select *Save* and press **OK** to confirm or select *Cancel* and press **OK** to cancel.

Note: When programming a recording, we recommend that you check the After Recording option in the PVR Settings menu to determine what will happen after the recording concludes. Please refer to section 7.6.2.



6.2.8 Live Recording

Insert a USB storage device with sufficient free space into the USB port.

1. Press **REC** to start a live recording. Whilst recording **REC** will flash on the top right hand corner of the screen.

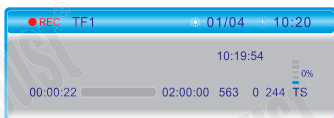

2. While recording, press **REC** to show detailed recording information. 3. Whilst the detailed recording information is displayed, press **REC** to set the duration. Use **◀** or **▶** to navigate and use the keypad numbers to input the time.

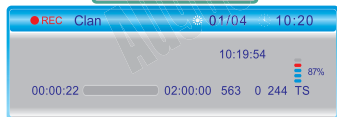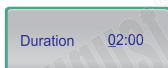

4. To stop a live recording, press **■**, then select **Yes** to finish or **No** to return.

6.2.9 Timeshift


Timeshift allows you to control a live TV program by pausing it and resuming it later.

To enable or disable Timeshift:

Path: MENU > **Media Player** > PVR Settings > Timeshift

1. Press **MENU**, select **Media Player** and press **OK**.

2. Select and enter PVR Settings.

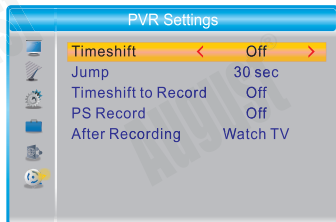

3. Select Timeshift, then use

◀ and **▶** to change between *Off*, *Auto* and *Pause*.

Off disables the Timeshift function. *Auto* enables the Timeshift function all the time.


Pause allows you to use Timeshift by pressing **⏸** while watching live TV. Select *Timeshift to Record*, then use **◀** and **▶** to change between *On* and *Off*.

Note: If Timeshift to Record is set to *On*, the program will be recorded while time shifting.

When Timeshift is set to *Auto*, the Timeshift function is enabled all the time.

When Timeshift is set to *Pause*, you can press **⏸** while watching live TV to begin using the Timeshift function.

When Timeshift is active, use the following buttons to control the live broadcasting:

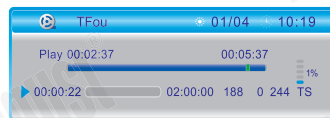

▶	Resume
⏸	Pause
◀◀	Rewind
▶▶	Fast forward
■	Exit time shift and return to the live broadcast

6.2.10 Audio

1. Press the **AUDIO** button.

2. Use **▲** and **▼** to select an available audio language.

3. Press **OK** to confirm or press **EXIT** to cancel.



6.2.11 Colour buttons

In TV mode, the coloured buttons perform the following functions:

ZOOM	Zoom in. Once zoomed in, use ▲/▼/▶/◀ to select the display area
ASPECT	Cycle through the following Aspect Ratio settings: <i>Auto</i> , <i>4:3PS</i> , <i>4:3LB</i> and <i>16:9</i>
FORMAT	Cycle through the following Resolution settings: <i>480i</i> , <i>480p</i> , <i>576i</i> , <i>576p</i> , <i>720p (50Hz)</i> , <i>720p (60Hz)</i> , <i>1080i (50Hz)</i> , <i>1080i (60Hz)</i> , <i>1080p (50Hz)</i> and <i>1080p (60Hz)</i>
MP	Multi-view window

Multi-view mode allows you to view multiple channels at once. Use the arrow keys to select and preview a channel. Press **OK**, **MP** or **EXIT** to return to the live broadcast.



6.2.12 Media Player from USB Storage


In TV or Radio mode, press **USB** to enter the media player or select **Media Player** from the menu window.

Note: A USB storage device such as a USB stick or hard drive must be inserted in the USB port.

For detailed information about media player options, please refer to section 6.4.

6.2.13 Recorded Programs

To watch recorded programs, press **LIST** to enter the recorded program list (PVR).

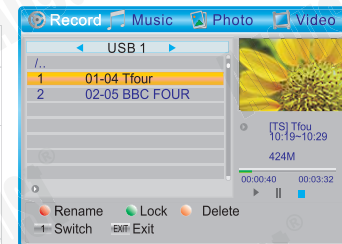

	Select a recorded file
	Go to previous/next page
	Play selected file in full screen
	Play selected file in the preview window
	Rename a file using the onscreen keyboard
	Lock/unlock a file. The default password is 0000. Once locked, will appear next to the locked file
	Mark file for deletion. Multiple files can be marked
Warning: Exiting the list of recorded programs or changing to another media type will automatically delete the marked files.	
	Exit and return to live broadcasting
	Switch to other media file types (Photo, Video, Music or PVR Recording)

- Full Screen mode Options

	Pause
	Rewind
	Fast forward
	Jump Backwards
	Jump Forward
Note: The Jump period can be set in section 7.6.2	
	Return to the list of recorded files.

6.3 Radio Mode

Press **TV/RADIO** to switch between TV mode and Radio mode.



6.4 Media player

In TV or Radio mode, press **USB** to enter the media player or select *Media Player* from the main menu. A USB storage device must be inserted into the USB port.



	Switch between media file types (Photo, Video, Music and Recordings)
	Select a folder or video file
	Go to previous/next page
	Enter folder or play the selected file
	Go Back
	Enter Edit mode



- In edit mode:

Press to rename a folder or file. Press to copy the selected folder or file, then choose the directory to copy it to and press .

Press to mark one or more files or folders for deletion. When you exit Edit mode, the marked files will be deleted.

Press to add a new folder.


Press **EXIT** to go back to the previous folder.

Press **MENU** to exit Edit mode.

6.4.1 Music

Press **MENU**, select *Media Player* and press **OK**. Then, select *Music* and press **OK**. Alternatively, if you are already in Media Player mode, press **<1>** to switch between media types until you reach Music.

- File Options

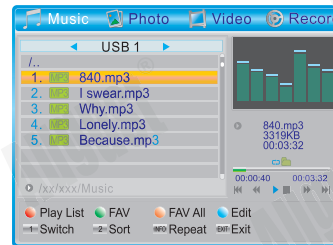


	Select a folder or music file
	Show or edit the list of favourites
	Add or remove a file from the list of favourites
	Add or remove all files from the list of favourites
	Sort the files in the current directory by Name, Time, Size or Favourite
	Change the repeat mode between repeat one, repeat folder and random
	Pause
	Resume
	Rewind
	Fast forward
	Previous video
	Next video
	Return to the video list

6.4.2 Photo Viewer

Press **MENU**, select *Media Player* and press **OK**. Then, select *Photo* and press **OK**. Alternatively, if you are already in Media Player mode, press **<1>** to switch between media types until you reach Photo.

- File Options

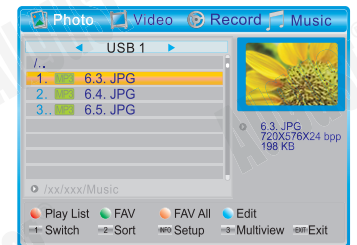

	Select a folder or photo
	Show or edit the list of favourites
	Add or remove a file from the list of favourites
	Add or remove all files from the list of favourites
	Sort files in the current directory by Name, Time, Size or Favourite
	Edit slide show options
	View photos in multi-view mode
	View photos in full screen mode or start a slideshow

- Full Screen mode Options

	Pause slideshow
	Resume slideshow
	Zoom in
	Restore to original size
	Go to next photo
	Go previous photo
	Rotate the photo

6.4.3 Video

Press **MENU**, select *Media Player* and press **OK**. Then, select *Video* and press **OK**. Alternatively, if you are already in Media Player mode, press <1> to switch between media types until you reach Video.



- File Options

	Select a folder or video file
Note: The selected file will be played in the preview window.	
	Sort files in the current directory by Name, Time or Size
	Change the repeat mode between repeat one and repeat folder
	Play file in full screen

- Full Screen mode Options

	Pause
	Resume
	Rewind
	Fast forward
	Previous video
	Next video
	Return to the video list

6.4.4 PVR

Please refer to section 6.2.13 Recorded Programs.

7 Main Menu (detailed access to functions)

In TV or Radio mode press **MENU** to enter the main menu. Press **EXIT** or **MENU** to close the menu.

In the main menu, use and to navigate between the *Channel*, *Channel Search*, *System Setup*, *Tools*, *Network* and *Media Player* menus.

Press **OK** or to enter a menu or **EXIT** to go back to the main menu.




7.1 Channel

Path: MENU > Channel > Channel Manager

Press **MENU**, select *Channel* and press **OK**. Then, select *TV Channel Manager* and press **OK**.

7.1.1 TV Channel Manager

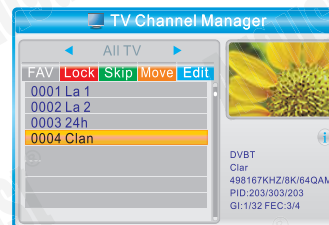

/ : Select a channel.

EXIT: Return to the *Channel* submenu.

When you press **EXIT**, if any changes have been made, select *Yes* to confirm or select *No* to cancel.

- Favourites

Press **FAV** to enable / disable the favourites function.

Select a channel, then press **OK** to see the favourites lists.

Select a list, then press **OK** to add / remove.

Press **EXIT** to go back.

- Lock

Press to enable / disable the lock function.

Select a channel and press **OK** to lock / unlock that channel.

The default password is 0000.

- Skip

Press to enable / disable the skip function.

Select a channel then press **OK** to skip / unskip.

- Move

Press to enable / disable the move function.

Select a channel and press **OK** to move it.

Use or to move the channel. Press **OK** to finish moving.

- Edit

Press to enter the Edit Channel submenu, from which you can sort, rename and delete channels.



Press to sort the channels in a different order. Select between *Name (A-Z)*, *Name (Z-A)*, *Free/Scramble* or *Lock*, then press **OK** to confirm or press **EXIT** to cancel.

Press to enable the rename function. Select a channel, then press **OK** to rename.

Press to enable / disable the delete function. Select a channel, then press **OK** to delete. The default password is 0000.

Press **EXIT** to exit the Edit Channel submenu.

7.1.2 Radio Channel Manager

Press **Menu**, select *Channel* and press **OK**. Then, select *Radio Channel Manager*. Alternatively, if you are in TV Channel Manager mode, press **TV/Radio** to switch to the Radio Channel Manager.


 

The Radio Channel Manager operates in the same way as the TV Channel Manager. Please refer to section 7.1.1 for further instructions. Press **TV/RADIO** to switch between the TV Channel Manager and the Radio Channel Manager. Press **EXIT** to go back to the previous submenu.

7.1.3 Delete All


Press **MENU**, select  *Channel* and press **OK**. Select *Delete All* and press **OK**.

This option will reset the TV and Radio channel lists. Press **OK**, then input the password to delete all channels. The default password is 0000. Select *Yes* to confirm or *No* to cancel.

7.1.4 Channel Play Type

Press **MENU**, select  *Channel* and press **OK**. Then, select *Channel Play Type*, press **OK** and use  and  to change the type of channel displayed between *All*, *Free* and *Scrambled*. Press **EXIT** to return to the **Channel** submenu.


7.2 Channel Search


Press **MENU**, select  *Channel Search* and press **OK**.

7.2.1 Auto Search

Path: MENU >  Channel Search > Auto Search



Press **MENU**, select  *Channel Search* and press **OK**. Then, select *Auto Search* and press **OK**.

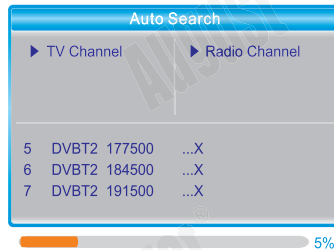

Use  or  to alter the selected setting.


FTA Only: Enable this option to search for free to air channels only.
T2 Signal Only: Enable this option to search for HD channels only.


Select *Search* and select *Yes* to start searching or select *No* to cancel.


Note: When performing a new scan, the channel list will not be updated but will be replaced by the channels that are found.

7.2.2 Manual Search

Path: MENU >  Channel Search > Manual Search

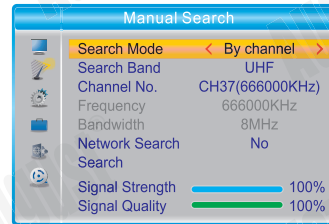

Press **MENU**, select  *Channel Search* and press **OK**. Then, select *Manual Search* and press **OK**.



Use  or  to alter the selected setting.

Search Mode: Choose either *By Channel* or *By Frequency*.

Selecting *By Channel* allows you to select a channel number and search for it using the default frequency of that channel.

Navigate to *Channel No.* and use  and  to change the channel.

Selecting *By Frequency* allows you to enter a specific frequency to search. Navigate to *Frequency* and use the number keys to enter the desired frequency.


Network Search: Enable the *Network Search* option to allow the DVB425 to search all channels with ONID (Original Network ID) on the selected frequency.

Note: Prior to scanning, a preview of the signal strength and quality for the selected channel or frequency will be displayed on the screen. Select *Search* and press **OK** to start scanning.

7.2.3 Aerial Power

The DVB425 can output 5V power from the coaxial aerial socket. This allows you to power compatible indoor amplified aerials.

Path: Menu >  Channel Search > Aerial Power


Press **MENU**, select  *Channel Search* and press **OK**. Then, select *Aerial Power* and press **OK**.

Note: DO NOT activate this function if using a rooftop aerial or if your indoor aerial is powered by a power adaptor as it will negatively affect the signal quality.

7.2.4 Standby Loophrough


While in standby mode, the DVB425 can provide an antenna point for a second receiver or TV. Follow the instructions below to ensure that the Loophrough function is enabled, then connect the second device to the Antenna Out (Please see section 4.2).

Path: Menu >  Channel Search > Loophrough in Standby



Press **MENU**, select  *Channel Search* and press **OK**. Then, select *Loop Through in Standby* and press **OK**. Finally, select *On* to enable the loophrough function or *Off* to disable it.

7.2.5 LCN

Path: MENU >  Channel Search > LCN

Press **MENU**, select  *Channel Search* and press **OK**. Then, select *LCN* and press **OK**.


LCN (Logical Channel Number) provides channel sorting as intended by the broadcaster 1 = BBC1, 2 = BBC2 etc.

Enable/disable this function using  /  to sort channels by LCN.

Tip: We strongly recommend leaving this function enabled.

7.3 System Setup

Path: MENU >  System Setup

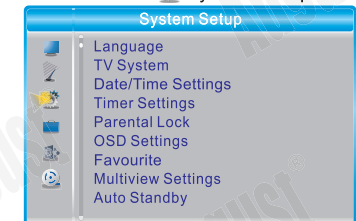

7.3.1 Language

Path: MENU > System Setup > Language



▲ / ▼: Navigate through the submenu.
◀ / ▶: Change the selected setting.

- Language

Select your preferred system language from among *English, French, German, Italian* and *Spanish*.

- First Audio

Select the default audio language for TV from among *English, French, German, Italian* and *Spanish*.

- Second Audio

Select the second audio language for TV from among *English, French, German, Italian* and *Spanish*.

- Subtitle Language

Select the subtitle language from among *English, French, German, Italian* and *Spanish*.

- Teletext

Select the teletext language from among *English, French, German, Italian* and *Spanish*.


- Subtitle

Set Subtitle to *Normal* or *Hard of Hearing* to enable subtitles. Set it to *Off* to disable subtitles.

Note: Subtitles are not provided by all programs.

7.3.2 TV System

Path: MENU > System Setup > TV System

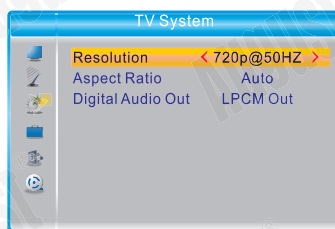

▲ / ▼: Navigate through the list of options and submenus.

OK: Enter a submenu or confirm changes.

- Resolution

Select the desired resolution from among the following options:
By Source, By Native TV, 480i, 480p, 576i, 576p, 720p@50Hz, 720p@60Hz, 1080i@50Hz, 1080i@60Hz, 1080p@50Hz or *1080p@60Hz*.

In the pop-up window, select *Yes* to confirm the new resolution or *No* to revert to the previous setting.

- Aspect Ratio

Select the desired aspect ratio from among *Auto, 4:3PS, 4:3LB* or *16:9* and confirm.

- Digital Audio Out


Choose either *LPCM Out* or *BS Out* and confirm.

Note: *BS* stands for Bitstream. *LPCM* stands for Linear Pulse-code modulation.

Tip: We strongly recommend using *LPCM Out*.

7.3.3 Date/Time Settings

Path: MENU > System Setup > Date/Time Settings
Press **MENU**, select *System Setup* and press **OK**. Then, select *Date/Time Settings* and press **OK**.

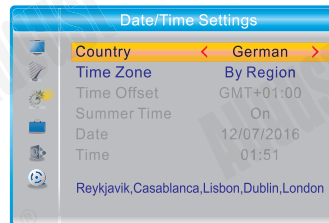

- Country

Select *Country*, press **OK** then choose one of *United Kingdom, France, Spain, Germany* or *Italy*. Press **OK** to confirm.

- Time Zone

Select *Time Zone*, press **OK** and choose one of *By Region, User Defined* or *Off*. Press **OK** to confirm.

By Country: When *Time Zone* is set to *By Country*, all clock settings will be set automatically according to the country selected.

Tip: We strongly recommend setting *Time Zone* to *By Country*.

User Defined: Setting *Time Zone* to *User Defined* allows you to set the *Time Offset* and *Summer Time* options manually.

Off: Setting *Time Zone* to *Off* allows you to set the *Date* and *Time* manually.

To input the time and date manually, select *Off*, go to *Date* or *Time*, then use **◀** and **▶** to select the number to change and use the number keys to enter the new number.

7.3.4 Timer Settings


Path: MENU > System Setup > Timer Settings
Press **MENU**, select *System Setup* and press **OK**. Then, select *Timer Settings* and press **OK**. Select a timer, then press **OK** to enter.

Please refer to section 6.2.7 for more detailed information.

Up to 8 timers can be added.

7.3.5 Parental Lock

Path: MENU > System Setup > Parental Lock
Press **MENU**, select *System Setup* and press **OK**. Then, select *Parental Lock* and press **OK**.

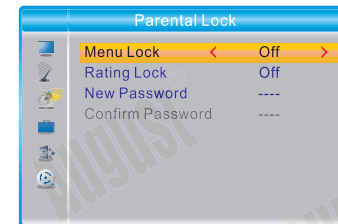

Input the password to enter the *Parental Lock* menu. The default password is 0000.

- Menu Lock:

If the *Menu Lock* is *On*, you will be required to enter the password to access the *Channel* or *Channel Search* menus.

- Rating Lock:

Press **OK** to adjust the *Rating Lock*. Select *Off* or an age rating between AGE 4 and AGE 18.


- New password

To set a new password, use the keypad numbers to enter the new password, then enter the new password again to confirm. Select *Yes* to return.

7.3.6 OSD Settings

Path: MENU > System Setup > OSD Settings

Press **MENU**, select *System Setup* and press **OK**. Then, select *OSD Settings* and press **OK**.

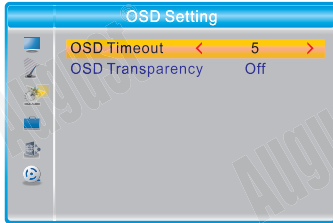

- OSD Timeout

OSD Timeout refers to the time that information remains on screen before disappearing. Select the desired onscreen display time from *1 second* to *10 seconds* in steps of 1 second.


- OSD Transparency

Set the transparency of the onscreen display by choosing from among *Off*, *10%*, *20%*, *30%* and *40%*.

7.3.7 Favourite

Path: MENU > System Setup > Favourite

Press **MENU**, select *System Setup* and press **OK**. Then, select *Favourite* and press **OK**.

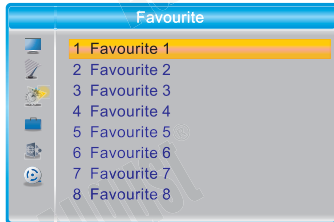

The *Favourite* submenu allows you to create up to 8 lists of favourite channels. You can then add channels to a list through the TV Channel Manager (please refer to section 7.1.1).

To rename a Favourite list, select the list, press **OK**, then enter the new name using the onscreen keyboard. Press **OK** to confirm.

	Enable / disable caps lock
	Delete
	Confirm
	Cancel

7.3.8 Multiview Settings

Path: MENU > System Setup > Multiview Settings

Press **MENU**, select *System Setup* and press **OK**. Then, select *Multiview Settings* and press **OK**.

Choose between *3x3 Pictures* and *4+1 Pictures* to change the picture layout of the multi-view window.

You can access the multi-view window while watching TV by pressing .

7.3.9 Auto Standby

Path: MENU > System Setup > Auto Standby

Press **MENU**, select *System Setup* and press **OK**. Then, select *Auto Standby* and press **OK**.

The *Auto Standby* function causes the DVB425 to go into standby mode automatically if no action is taken within the selected time. Choose between *Off*, *30 Min*, *1 Hour*, *2 Hours* and *3 Hours*.

7.4 Tools

Path: MENU > Tools


Press **MENU**, select *Tools* and press **OK**.



7.4.1 Information

Path: MENU > Tools > Information
Press **MENU**, select *Tools* and press **OK**. Then, select *Information* and press **OK**.


From here, you can see the *Model*, *Hardware* version and *Software* version. Press **EXIT** to return to the *Tools* menu.

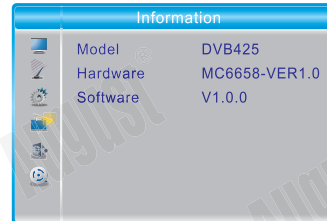

7.4.2 Factory Reset

Path: MENU > Tools > Factory Reset

Press **MENU**, select *Tools* and press **OK**. Next, select *Factory Reset* and press **OK**. Then, enter the password.

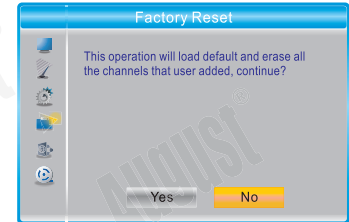

Select **Yes** to reset the device to the default factory settings or select **No** to cancel and exit.


Once the default factory settings have been restored, the *Installation Guide* will appear. Please refer to section 6.1 for further instructions.

7.4.3 Software Update

Path: MENU > Tools > Software Update

This function allows you to update the software of the DVB425.

To find the most recent software, please go to our website: www.augustint.com

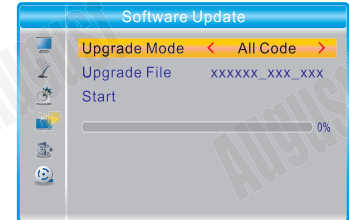

1. Download the software to a USB storage device and insert it into the DVB425's USB port.
2. Select *Software Update* and press **OK**.
3. For *Upgrade Mode*, select *All Code*.

4. Go to *Upgrade File*, then use ◀ and ▶ to select the file.

5. Select *Start*, then press **OK**.

6. Select *Yes* to update or select *No* to return.

Once updated, the Installation Guide will appear. Please refer to section 6.1 for further instructions.


7.4.4 Remove USB Device Safely

Path: MENU > Tools > Remove USB Device Safely
Press **MENU**, select *System Setup* and press **OK**. Then, select *Remove USB device safely* and press **OK**. Next, press ▼, then press **OK** and remove the USB device.

7.5 Network


Path: MENU > Network
Press **MENU**, select *Network* and press **OK**.

From here, you can set the network options, listen to online radio or check the weather forecast. In order to use these functions, please ensure that the DVB425 is connected to the internet via an Ethernet cable.

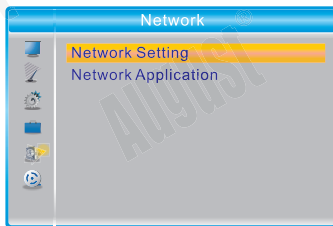

- Network Settings:

Network: Select between *Ethernet* and *None* to enable or disable the network function.

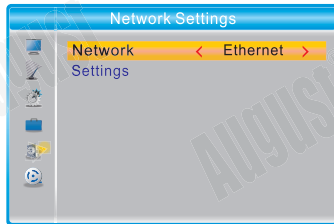


Settings: Select between *On* and *Off* for DHCP.

Selecting *On* allows the DVB425 to set DHCP information automatically. Selecting *Off* allows you to set DHCP information such as *IP Address* or *DNS* manually.

To input the settings manually, use ◀ and ▶ to select the digit to change and use the keypad to enter the new number.

Select *Apply* and press **OK** to save the settings or press **EXIT** to return.

- Network Applications:

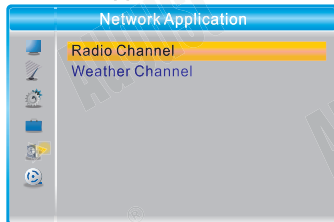

Radio Channel:


1. Press **OK** to enter.
2. Select a country.
3. Select a radio station.
4. Press to stop or press to play.

Weather Channel:

1. Press **OK** to enter.
 2. Select a country.
 3. Select a city to see its weather.
- Press **Pg Dn** and **Pg Up** for faster navigation.

7.6 Media Player

Path: MENU > Media Player
Press **MENU**, select *Media Player* and press **OK**.

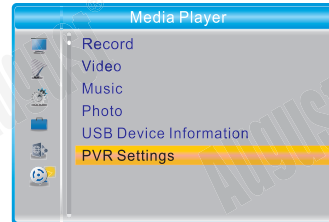

For instructions concerning the PVR, Video, Music and Photo functions, please refer to section 6.4.

7.6.1 USB Device Information

Path: MENU > Media Player > USB Device Information
Press **MENU**, select *Media Player* and press **OK**. Select *USB Device Information* and press **OK**.

From here, you can see information about the USB storage device, format the device or change its DVR settings.



- Formatting your USB Device

Press to format the USB device.

Choose either *FAT* or *NTFS* format, then select **OK** to confirm or *Cancel* to return.

- USB Usage


Press to adjust whether the USB device will be used for recording only, timeshifting only or both recording and timeshifting.

Select **OK** to confirm or select *Cancel* to return.

7.6.2 PVR Settings:

Path: MENU > Media Player > PVR Settings

Press **MENU**, select *Media Player* and press **OK**. Then, select *PVR Settings* and press **OK**.

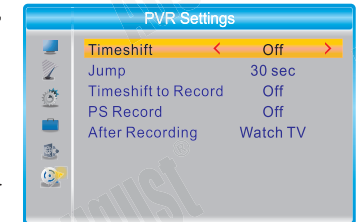

- Timeshift:

◀ / ▶ : Choose between *Off*, *Auto* and *Pause*.

Select *Off* to disable the Timeshift function.

Select *Auto* to enable the Timeshift function all the time.

Select *Pause* so that the Timeshift function can be used by pressing while watching live TV.

- Jump:

◀ / ▶ : Change duration between *30 seconds*, *1 minute*, *5 min*, *10min*, *15min*, *20min* and *30 minutes*.

While watching a recording, press to jump backwards or to jump forwards by the selected amount.

- Timeshift to Record:

Use ◀ and ▶ to change between *On* and *Off*.

Note: if Timeshift to Record is set to *On*, the program will be recorded while time shifting.

- PS Record:

The *PS Record* (Program Stream Record) function allows you to record only the current program. Enabling this function will reduce the size of the recording file.

◀ / ▶ : Change between *On* and *Off*.

- After Recording:

Use ◀ and ▶ to change between *Watch TV* and *Go to Stand-by Mode*.

8. Specifications

DVB-T/T2 Video Decoder	MPEG-2 MP@HL HEVC/H.265 up to 1920 x 1080 50/60Hz AVC/H.264, D25HP@L4.1 MPEG4 A SP
DVB-T/T2 Audio Decoder	MP3 WAV AAC AC3 WMA
DVB-T/T2 Band	6, 7, 8MHz
DVB-T/T2 Frequency	VHF: 177.5~226.5MHz UHF: 474~858MHz
Video Output	HDMI, SCART
USB Port	USB 2.0 host (5V)
Power Input	AC 220~240V 50/60Hz
Power consumption	< 12.0 W
Dimensions	168 x 118 x 37 mm
Net Weight	338g

Media Formats

Music	mp3, ac3, m4a, aac, wav, wma, ogg, flac
Photo	jpg, jpeg, bmp, png
Movie	mpg, mpeg, dat, ts, trp, tp, m2ts, vob, mp4, mov, mkv, divx(optional), avi, flv, 3gp

9. Troubleshooting

Problems	Possible Causes and Solutions
No Power	<ul style="list-style-type: none"> • Plug the power cord into the wall socket tightly and turn on the device. • The status LED lights green while switched on and red in standby mode.
No image	<ul style="list-style-type: none"> • Check the connection to the TV or monitor. • Ensure the correct source is selected. • Check the video input on your TV or monitor. • Change the aspect ratio of the DVB425 by pressing ASPECT. • Change the Video Format of the DVB425 to reduce the resolution of the image by pressing VFORMAT.
No sound	<ul style="list-style-type: none"> • Press <MUTE> to unmute. • Press <VOL+> to increase the volume. • Check the volume on the TV or monitor. • Check cable connections.
No Signal	<ul style="list-style-type: none"> • If the signal is too weak, please try using a rooftop aerial or an amplified aerial. • You are using a rooftop aerial, ensure that the Antenna Power option is <i>Off</i>. Please refer to section 7.2.3 for further instructions. • If you are using an indoor aerial, try moving it around or changing its position.
Picture Freezing, Sound Distorting	<ul style="list-style-type: none"> • The signal provided by the aerial may be too weak or the aerial may be improperly connected. • If you are using a rooftop aerial, ensure that the DVB425's Antenna Power option is set to <i>Off</i>. Please refer to section 7.2.3. • If you are using an indoor aerial, try moving it around or changing its position. • Try using another connection cable.
Remote control does not work	<ul style="list-style-type: none"> • Change the batteries. • Ensure that you are within the remote control's operating range (max 8 meters, 30°). • Move the DVB425 away from direct sunlight.
No Recording	<ul style="list-style-type: none"> • Ensure that a USB storage device is connected to the USB port. • Ensure that there is sufficient free space on the USB storage device. • Try using another USB storage device with sufficient space. • Please refer to section 6.2.8.
No Timeshift	<ul style="list-style-type: none"> • The Timeshift function is not enabled by default. Please refer to section 6.2.9 for instructions on how to enable it. • Ensure that there is sufficient free space on the USB storage device.
Password	<ul style="list-style-type: none"> • The default password is 0000.
Factory reset	<ul style="list-style-type: none"> • Press MENU to access the main menu. • Go to Tools and press OK to enter. • Select Factory Reset. • Press OK, then enter the password. The default password is 0000. • Select Yes to reset the device to the default factory settings or select No to exit. Once the default settings have been restored, the Installation Guide will appear.

 **Warning**

This operation instruction manual is intended only for reference. No further notice is required for any modification to the information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

 **Warning**

No user serviceable components are fitted inside this Receiver. Do not attempt any repairs, as this will invalidate the warranty. Any repairs must be carried out by either the manufacturer or their nominated service centre. Parts inside this set are subject to high voltage.

10. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product was purchased.
- The product must be correctly installed and operated in accordance with the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main units and does not cover the accessories.
- The warranty does not cover damage caused by misuse, negligence, accident or natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufacturers disclaim any liability for incidental or consequential damages.
- Please consult one of our customer service advisers before returning any product. We are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44 (0) 845 250 0586

Email: service@augustint.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>.



Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.