

# August®

## User Manual

WR320



**August International Ltd**  
Rawmec Business Park  
Hoddesdon EN11 0EE  
United Kingdom  
T: +44(0) 845 250 0586  
(Carrier Rates Apply)  
E: [service@augustint.com](mailto:service@augustint.com)

EU Distributor:  
Daffodil Germany GmbH  
Bayernstr. 10  
D-30855 Langenhagen  
Germany  
T: +49 (0) 511 97812978

[www.augustint.com](http://www.augustint.com)

- |    |   |
|----|---|
| EN | Wi-Fi Wireless Multiroom Receiver       |
| FR | Récepteur Wi-Fi Multiroom Sans-Fil      |
| DE | Schnurloser Wi-Fi Multiroom Empfänger   |
| IT | Ricevitore Wi-Fi Multiroom Senza Fili   |
| ES | Receptor WiFi Multiroom Inalámbrico     |
| PL | Bezprzewodowy odbiornik Wi-Fi Multiroom |
| RU | Беспроводной приемник Wi-Fi Multiroom   |

# User Manual

Thank you for purchasing the August WR320. This user manual is designed to familiarize you with all the features of this device. Please take the time to read this user manual carefully, even if you are already familiar with a similar product.

## GPL

August Alink is a free and open source application. To view the GNU General Public License (GNU GPL or GPL), please use the link below or visit our website [www.augustint.com](http://www.augustint.com):  
<http://augustint.com/en/gpl-290.html>

## Safety

To ensure the safety of yourself and others, please read the Safety Instructions before using this device. Please do not disassemble this product as it can be unsafe and will invalidate the manufacturer's warranty.

## Disposal

Please ensure the product and accessories are disposed of in compliance with the WEEE (Waste Electrical and Electronic Equipment) Directive and any other regulations applicable to your country. Always check with the environment agency and any other relevant authorities for current disposal regulations.

## Declaration of Conformity







The Declaration of Conformity can be found on our website at <http://augustint.com/en/declaration/>

## Customer Service

You can contact us by phone on: +44(0)845 250 0586 (Carrier Rates Apply)  
or by email at: [service@augustint.com](mailto:service@augustint.com) should you require further technical support or customer service.


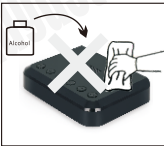 
# 1. Safety Instructions

## ■ Storage and Use

	Do not store or use this device in extreme temperatures.		Do not store or use this device in wet or damp environments.
	Do not expose this device to dust, oil or smoke.		Do not drop or strike this device.
	When transporting this device, store securely to avoid impact damage.		Do not scratch this device with sharp objects.

## ■ Maintenance

Please unplug all leads before cleaning this device.

	Wipe the device and buttons with a soft cloth.		Never wipe this device with an abrasive cloth or apply detergent, alcohol or chemical based cleaning products.
--	--	---	--

# 2. Main Features

- Wi-Fi Audio Receiver to add Multiroom Capability to any Home Audio System
- Bluetooth Audio Mode for Bluetooth Source Devices
- Ethernet and Wireless Internet Connection
- Optical and 3.5mm Audio Out for Digital and Analogue Connection

# 3. Box Contents



Wi-Fi Wireless Receiver

USB Power Cable

3.5mm Audio Cable

 


3.5mm to 2xRCA Audio Cable

User Manual


## 4. Part Names and Functions

### 4.1 Top

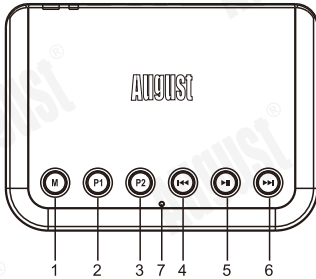

1. Mode Switch
2. Preset 1
3. Preset 2
4. Previous
5. Play / Pause
6. Next
7. Status LED

### 4.2 Back

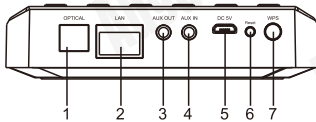 

1. Optical-Out
2. LAN
3. AUX-Out
4. AUX-In
5. Micro USB Power Port
6. Reset
7. WPS Button

### 4.3 Status LED Meaning

Indication	Status LED
Entering Wi-Fi Mode	Flashing Green
Wi-Fi Mode	Green
Line – In Mode	Red
Bluetooth Pairing Mode	Flashing Blue
Bluetooth Connected	Blue

## Quick Start Guide

1. Scan the QR code below with your device or search for 'Legacy Player' to download and install the app from Google Play or the Apple Store.



**Note:** For Blackberry phones, go to [www.augustint.com](http://www.augustint.com) to download the application as an .apk file and install it.

2. Enable Wi-Fi on your device and connect to your network.
3. Connect the WR320 to a powered USB port using the provided cable. The WR320 will switch on automatically and enter Wi-Fi mode. Once in Wi-Fi mode, the status LED will light green.
4. Run the App and follow the on-screen guide to set up.

**Tip:** Once in Wi-Fi mode, you can connect the WR320 to your Wi-Fi directly from your router, without using the application. Press **WPS** on the WR320, then press the WPS button on your router. They will connect automatically.

# Table of Contents

<b>1. Safety Instructions</b>	-----1
<b>2. Main Features</b>	-----2
<b>3. Box Contents</b>	-----2
<b>4. Part Names and Functions</b>	-----3
4.1. Top	-----3
4.2. Back	-----3
4.3. Status LED Meaning	-----3
<b>5. Operation</b>	-----6
5.1. Installation	-----6
5.2. Connection	-----7
5.3. Wi-Fi Connection	-----7
5.3.1. Network Connection	-----7
5.3.2. Direct Connection	-----11
5.4. Bluetooth Connection	-----11
5.5. Multi and Solo Mode (Wi-Fi Connection Only)	----13
5.5.1. Solo Mode	-----13
5.5.2. Multi Mode	-----13
5.6. Receiver's Options (Wi-Fi Connection Only)	----13
5.7. Music Player (Wi-Fi Connection Only)	-----14
5.7.1. Local Music	-----15
5.7.2. Third Party Music Providers	-----15
5.8. Line-In Mode	-----17
<b>6. Troubleshooting</b>	-----18
<b>7. Specifications</b>	-----19
<b>8. Warranty</b>	-----20

## 5. Operation

### 5.1. Installation

1. Scan the QR code below with your device or search for 'Legacy Player' to download and install the app from Google Play or the Apple Store.



 
 
**Note:** For Blackberry phones, go to [www.augustint.com](http://www.augustint.com) to download the application as an .apk file and install it.

2. Enable Wi-Fi on your device and connect to your network.
3. Connect the WR320 to a powered USB port using the provided cable. The WR320 will switch on automatically and enter Wi-Fi mode. Once in Wi-Fi mode, the status LED will light green.


**Tip:** Once in Wi-Fi mode, you can connect the WR320 to your Wi-Fi directly from your router, without using the application. Press **WPS** on the WR320, then press the WPS button on your router.. They will connect automatically.

## 5.2 Connection

### Aux connection

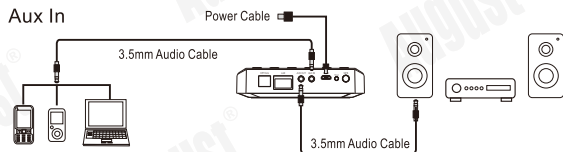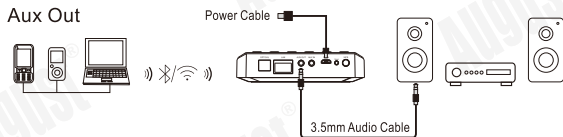

### Optical connection

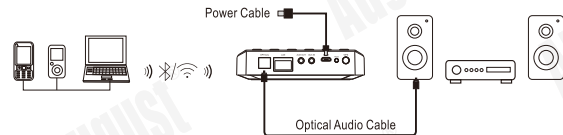 


1. Connect the power cable to the micro USB Power Port.
2. Connect the WR320 to the AUX-In socket of your playback device using either a 3.5mm or optical cable.



## 5.3 Wi-Fi Connection
 
### 5.3.1 Network Connection


1. Run the application and press 'Add Device'.

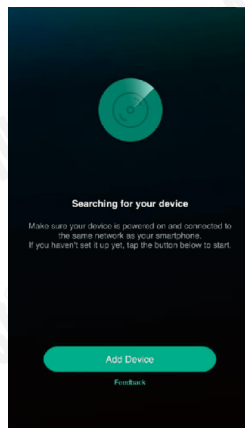

  
2. Press 'Settings' and connect the mobile device to a temporary wireless network created by the speaker.

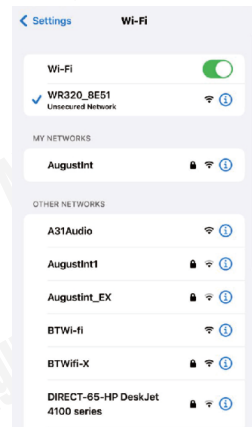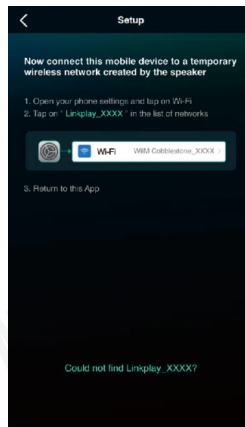

 3. Confirm you Wi-Fi network's name and enter the password, then press 'Continue'.

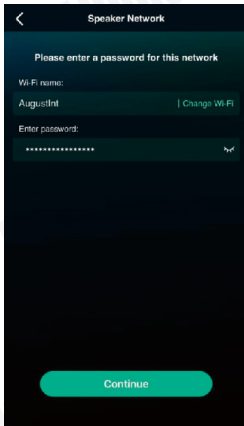


 4. The application will set up the Wi-Fi connection for the Speaker.

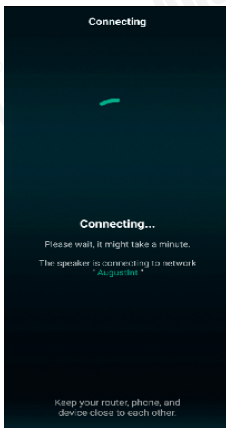


-9-

 5. Once connected, press 'Next' to finish.

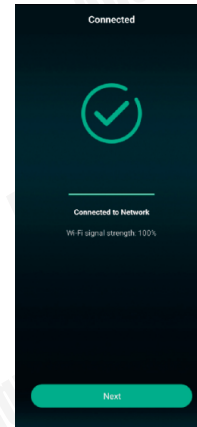

 6. To add another device, press '+' on the 'Device List' page and repeat steps 2-4.

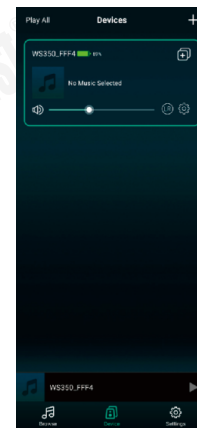

-10-

### 5.3.2. Direct Connection

You can also connect your phone or tablet directly to the receiver's Wi-Fi network.

1. Turn on the Wi-Fi receiver.
2. Enter the Wi-Fi setting of your device and connect to the receiver's Wi-Fi network. The Wi-Fi network's name is 'WR320\_xxxx'.
3. Once connected, your WR320 has become a router and you can play music or add another Wi-Fi device.
4. To add another Wi-Fi device, use the same procedure shown in 5.3.1.

**Note:** To restore the factory settings for the Wi-Fi network, press and hold the **Reset** button for 10 seconds.

### 5.4. Bluetooth Connection

1. Press 'mode' to change between the Wi-Fi, Bluetooth and Line-in modes.
2. The WR320 will enter reconnection mode and will connect automatically to any previously known device. If no known device is available, the WR320 will automatically enter pairing mode after 4 seconds and the status LED will flash blue.
3. Enable Bluetooth on the source device.
4. Scan for Bluetooth devices on your source device. Select WR320 to connect to it. Once successfully paired, the status LED will light blue.
5. To pair to a new device, press and hold the Play / Pause button for 3 seconds to switch WR320 into pairing mode again. This can be done either when a device is already connected to the receiver or when

 
the WR320 is in reconnection mode. In pairing mode, the status LED will flash blue.

**Note:** When the source device is switched off, the WR320 will enter reconnection mode. The LED will flash blue and you will be able to reconnect to any previously paired device.

Windows XP and Windows Vista require third party software to connect to WR320. If you are using a later version of Windows and the WR320 is not outputting audio, please check that the drivers for your PC's Bluetooth module are up to date and that the Audio Output source is set to the receiver.

### 5.5 Multi and Solo Mode (Wi-Fi Connection Only)

Two Speaker playback settings can be selected in the 'DEVICE LIST'

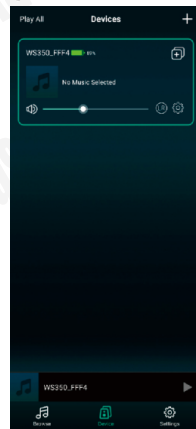

**Tip:** The 'DEVICE LIST' can be accessed from any screen of the app by sliding the screen towards the left.




### 5.5.1 Solo Mode

 Solo mode enables multiple speakers that are connected to the same network to play different music individually. Speakers are by default in solo mode.


### 5.5.2 Multi Mode

Multi mode enables you to group some or all of the speakers connected to a network and have them play the same music. This can be used to separate left and right channels between speakers (see 5.6 Receiver Options). To group speakers, press “+” next to the device name, and select the devices you want to group then press ‘Done’. To ungroup the speakers, press ‘+’ next to the grouped device name, and unselect the device you want to ungrouped then press ‘Done’.

### 5.6 Receiver's Options (Wi-Fi Connection Only)

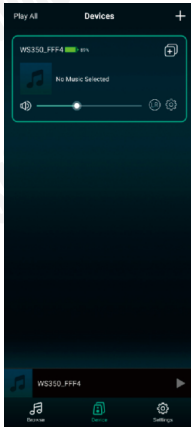


You can change your device's settings under the Devices.

1. Press  to see the available options.
2. Press 'Rename' to change the name of the speaker. Select one available name, then press 'Finish' to confirm or press '<' to cancel. You can also customize the speaker's name by selecting 'Custom...'
3. Press 'Speaker Info' to see the detailed information. Select 'Restore Factory Settings' to reset the receiver's Wi-Fi setting.

**Tip:** Press <L>, <R> or <LR> to change the channel between left, right and stereo for the selected speaker.


### 5.7 Music player (Wi-Fi Connection Only)

 In solo mode, multiple speakers can play different tracks. In multi-mode, all the speakers within the network will play the same track as the main speaker. To select a music source:

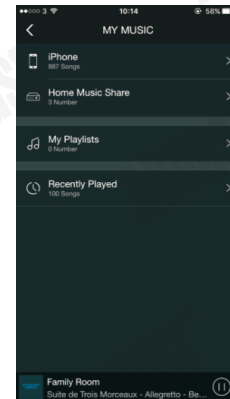


**Tip:** the different music sources can be accessed from any screen of the app by sliding the screen towards the right


### 5.7.1. Local Music


 
- Press the music icon under the Devices.
- Press 'My Music' to search for local music.
- Press the device icon to view all the tracks on the device and select one to play.
- Under 'Song', press  to see more options.

### 5.7.2 Third Party Music Providers

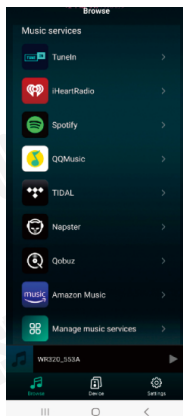


- Press "Manage music service" to change the list of music providers.
- Press the icon of a third party to see its options or open the application.
- Press 'Search' to search the online music provider for songs, artists and albums.

  **Tip:** For albums / stations, select one and press  to save this album for easy access. You can access albums / stations from the speaker's settings.

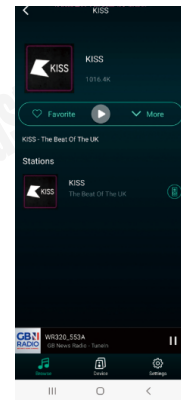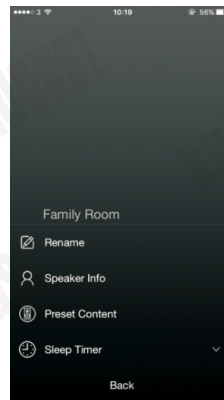

 **Note:** Some third party application need air cast and chose the playing device in the application.

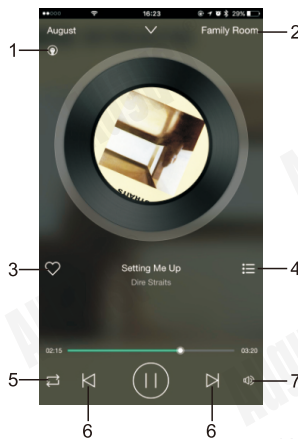

1. Current music source
2. Current speaker
3. Press to add to the favourites
4. Press to see the current playlist
5. Repeat and Shuffle option
6. Track controls
7. Volume control

## 5.8 Line-In Mode

Use the provided audio cable to connect your source device to the WR320.

Once the audio cable is plugged in, the receiver will enter line-in mode automatically and the status LED will light red.

In Line in mode, you will be able to play music from your source device on some or all of the Wi-Fi receivers in your multiroom system.

## 6. Troubleshooting

Problems	Solutions
Unable to switch on	<ul style="list-style-type: none"><li>• Check the power cable</li><li>• Ensure the USB port has power</li></ul>
Unable to connect to the receiver via Wi-Fi	<ul style="list-style-type: none"><li>• Ensure the Wi-Fi environment is 2.4 GHz</li><li>• Ensure the receiver is in Wi-Fi mode</li><li>• Ensure that both your device and the receiver are in the same network.</li><li>• To add a new speaker, please refer to section 5.1.</li><li>• Press and Hold <b>Reset</b> on the speaker to reset to factory setting, then try again.</li></ul>
Unable to pair my Bluetooth source device	<ul style="list-style-type: none"><li>• Confirm that the receiver is in pairing mode.</li><li>• Confirm that the receiver is within 10m of the source device</li><li>• Delete existing connection to speaker from source device and pair again.</li><li>• Press and hold the multi-function button for 2 seconds</li></ul>
Can't install the Bluetooth driver for the receiver on a computer	<ul style="list-style-type: none"><li>• For Windows 7 and 8, update the Bluetooth driver from the Bluetooth module manufacturer's website. For further information on you PC's Bluetooth module, please consult your PC supplier.</li><li>• Bluetooth receivers are not supported by Windows XP or Vista. A third party Bluetooth driver can be used to solve this issue.</li></ul>
There is no sound from my Bluetooth audio device	<ul style="list-style-type: none"><li>• Make sure the Bluetooth audio device is connected to the speaker via Bluetooth.</li><li>• Check the volume on both source device and your audio device.</li></ul>
No sound or intermittent sound in Wi-Fi mode.	<ul style="list-style-type: none"><li>• Ensure the Wi-Fi strength is good</li><li>• Reduce the audio quality in the app</li><li>• Reduce the usage of the router</li></ul>

## 7. Specifications

SNR	≥ 80dB
Distortion	≤ 1.0% at 1KHz
Frequency Response	20Hz-20KHz
Wi-Fi Band	2.4GHz
Wi-Fi Operation Range	Up to 100m
Wi-Fi Profile	802.11 a/b/g/n
Bluetooth Version	V4.0
Bluetooth Profiles	A2DP, AVRCP, PBAP
Bluetooth Operating Range	Up to 10m (Class 2 )
Power Input	DC 5V/500mA
Dimensions	140 x 86.5 x 25mm
Net Weight	165g

## 8. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

### **This warranty is subject to the following conditions:**

- The warranty is only valid within the country where the product was purchased.
- The product must be correctly installed and operated in accordance with the instructions given in this user manual.
- The product must be used solely for domestic purposes.
- The warranty covers only the main units and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident or natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufacturers disclaim any liability for incidental or consequential damages.
- Please consult one of our customer service advisers before returning any product; we are not responsible for any unexpected product returns.
- Any faulty product must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

### **Customer Service:**

Telephone: +44 (0) 845 250 0586 (Carrier Rates Apply)

Email: [service@augustint.com](mailto:service@augustint.com)

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>.



## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.