

AUGUST®

User Manual

DVB400

AUGUST®



Freeview HD Receiver and Media Player

August International Ltd
United Kingdom
Tel: +44 (0) 845 250 0586
www.augustint.com

User Manual

Thank you for purchasing this August Receiver. You may already be familiar with using similar products but please take the time to read these instructions carefully. They are designed to familiarise you with the product's many features and to ensure that you get the very best from your purchase.

Safety

Please read the Safety Instructions before using this product to ensure your safety and the safety of others.

Disposal

Please ensure the product and its accessories are disposed in compliance with WEEE (Waste Electrical and Electronic Equipment) Directive and any other applicable regulations. Please check with your local authority for current disposal regulations.

Declaration of Conformity

The Declaration of Conformity can be found on our website at <http://www.augustint.com/en/declaration/>

Customer Service

If you need help, please contact our Customer Service:

Telephone: +44 (0) 845 250 0586

Email: service@augustint.com

Quick Start Guide

DVB400






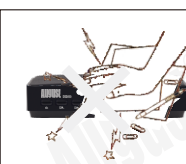
1. It is suggested that you use a roof top aerial when searching for TV channels for the first time.
2. Connect the device with a Monitor. We advise that you do this with the provided HDMI Cable if possible, as this should provide a high quality of TV. However, there is a Scart Port on the Box if required. After this, connect the device to Mains Power and use the power button on the remote to switch the device one.
3. When switching the device on for the first time, the message 'Boot' will appear on the Device, whilst the Installation Guide will load on the screen. Follow the on-screen instructions to select the appropriate OSD Language and Country, then press <OK>. The auto Channel Scan will then start. (Rest of text already there can be used)
4. If you have done the first time installation before, and would like to search for Digital Freeview channels again, or if you have moved to a different region and need to search channels again, press <MENU>, move to the "Channel Search" menu, select Auto Search and press <OK> to start the search. Once the search has finished, press <▲> or <▼> to select channels. Press <TV/RADIO> to switch between Freeview TV and Radio channels.
5. To play music, photos, movies or PVR from a USB memory stick, insert the memory stick into the USB port, press <MENU>, move to Media Player menu, select "Music", "Photo", "Video" or "PVR", press <OK> to view the file list. Select a file and press <OK> to Play.
6. Please note that the signal strength in some areas may not be sufficient to support TV reception using a portable aerial. The distance from the closest transmitter and other factors such as surrounding buildings, the walls of your house, weather and electromagnetic interference caused by power and telecommunication infrastructure may affect signal strength. Changing location may improve signal reception and a rooftop aerial designed for digital TV can be used to achieve the best possible reception.
7. For any further queries, please telephone August International Ltd helpline +44 (0) 845 250 0586 or email service@augustint.com

Contents

1. Safety Instructions	1
2. Box Contents	2
3. Part Names and Functions	3
4. Connection	7
5. Operation	8
6. Specifications	18
7. Troubleshooting	19
8. Warranty	20



1. Safety Instructions

Storage and Use

	<p>Keep this machine away from hot or cold places. Working temperature of this device is 0°C ~ 50°C, storage temperature is -10°C ~ 60°C.</p>		<p>Keep the Receiver away from water or damp environment.</p>
	<p>Never expose the Receiver to moisture, dust or smoke.</p>		<p>Avoid dropping or exposing to impacts.</p>
	<p>Never put this machine in containers that are unstable as this may cause damage.</p>		<p>Never extrude or chafe this machine with sharp objects.</p>

Maintenance

Please unplug all connection wires before cleaning this machine.

	<p>Please wipe this machine and buttons with a soft cloth. Only clean the screen with professional LCD TV screen cleanser.</p>		<p>Never wipe this machine with an abrasive cloth, detergent powder, alcohol and benzene etc. various propellants or chemical cleaning products.</p>
--	--	--	--

Operation Precautions


For the sake of safety, when you do not intend to use the Receiver, please switch off the power button.

Please ensure the DVB400 is located so that it has adequate ventilation.

Special Notice


Never try to repair this machine by yourself. In case of any fault or failure, please turn off the Receiver at once, and notify our company or the corresponding dealer. The Receiver is made up of many precision electronic components. Any disassembly or modification may lead to further damage.

2. Box Contents

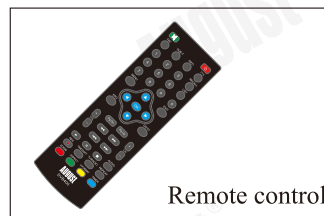


3. Part Names and Functions

3.1 Front

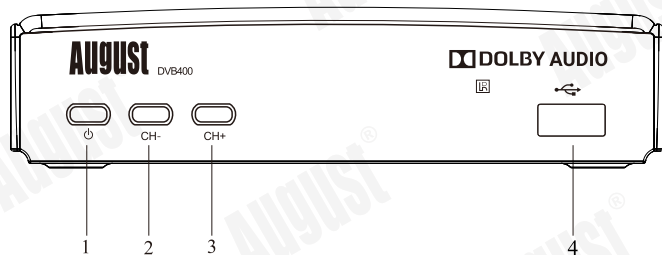

1. Power
2. Previous Channel
3. Next Channel
4. USB Port


3.2 Back

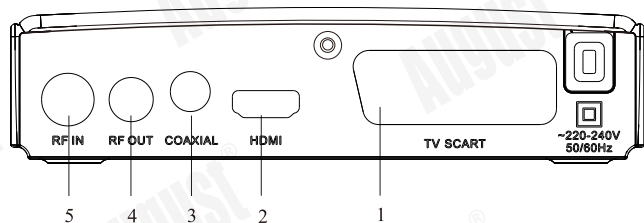

1. SCART
2. HDMI Port
3. Coaxial Audio Out
4. Antenna Out (Loop Through)
5. Antenna In

3.3 Remote Control

3.3.1 Remote Button Functions

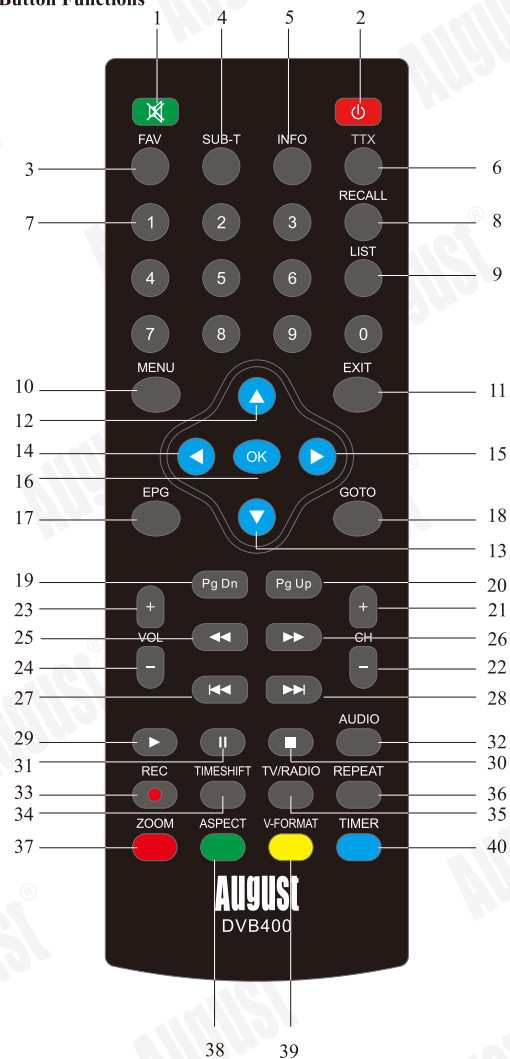

1. Mute / Unmute Sound
2. Power
3. Favourite Channel List
4. Subtitle
5. Information
6. Teletext (not available in UK)
7. Numbers
8. Channel Recall
9. PVR List
10. Main Menu
11. Exit
12. Up
13. Down
14. Left
15. Right
16. Confirm
17. Electronic Program Guide
18. Go To Function
19. Page Down
20. Page Up
21. Channel Up
22. Channel Down
23. Volume Up
24. Volume Down
25. Rewind
26. Forward
27. Previous Track
28. Next Track
29. Play
30. Stop
31. Pause
32. Audio Language
33. Record
34. Timeshift
35. TV / Radio
36. Repeat
37. Zoom In
38. Aspect Ratio
39. Resolution
40. Schedule


3.3.2 Use of the Remote Control

Please remove the PVC packaging before using the remote control for the first time.

1. Do not expose the remote control to direct sunlight or very strong/bright light.
2. Do not drop or step on the remote control or subject it to shocks.
3. Keep the remote control away from extreme hot or humid environments.
4. Keep the remote control away from water.

■ Operating range

1. The IR sensor on the remote control should aim directly to the sensor on the front of the device. It may not be possible to operate the device if there are obstacles between it and the remote sensor.
2. Use the remote control no further than 8 meters away from the sensor.
3. The receiving angle range should be $\pm 30^\circ$.

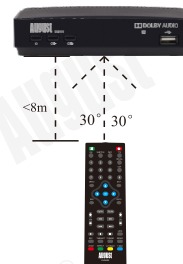

■ Replacing the Batteries

If the remote control does not function or if the operating range becomes reduced, replace the old battery with a new one.



Pull out the battery holder and remove the old battery.



Insert the new battery into the battery holder with the + side facing upwards.




Push back the holder.

*Note:

1. Please ensure proper disposal of used batteries.
2. To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control for a long period of time. If the battery leaks fluid, carefully wipe it out of the battery case, then change to a new lithium battery.


4. Connection

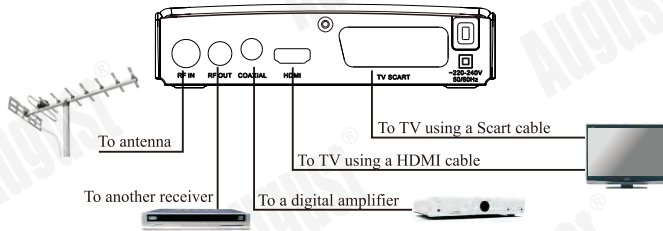

5. Operation

5.1 Initial Installation

After you first switch-on your device, an Installation Guide is displayed that allows you to set your location preferences and search for channels.

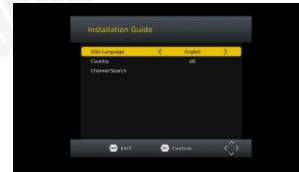

Press <▲> or <▼> to navigate up or down.
Press <◀> or <▶> to change the options.
After setting the OSD Language and Country, press <OK> to start the search.
Press <EXIT> to enter the main menu.


After the search has finished, you can start watching any channels which have been found. Press <TV/RADIO> to switch between Freeview TV and Radio channels.
If no channels are found, it will return to the Installation Guide. You can try a different location or use a rooftop aerial.

5.2 Channel Information

Press <INFO> in TV display mode to show Now and Next for the current station.



Press <INFO> again to show detailed information.

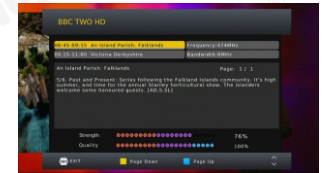

5.3 Channel List

Press <OK> in TV display mode to show the channel list. Press <◀> or <▶> to switch between the TV and Radio channel list. Press <▲> or <▼> to select the desired channel and press <OK> to confirm. Press <EXIT> to close the list.



5.4 Recall


Press <RECALL> in TV display mode to change back to the last channel you watched.

5.5 Record

Plug a USB memory stick into the USB socket, then press <REC > to record the channel you are watching. Whilst recording a timer will show in the top left corner of the screen.



To stop recording, press <■>. Then press <OK> to confirm or <EXIT> to keep recording.

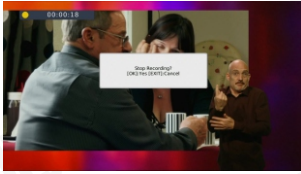


5.6 Time Shift

To enable Time Shift, press <TIMESHIFT> whilst watching TV, the program will pause. Press <▶> again to resume, <◀◀> to rewind and <▶▶> to fast forward. Press <■> to exit Time Shift and return to the live broadcast.




5.7 Schedule

Press <TIMER> in TV display mode to enter the Schedule. This function supports scheduled viewing or scheduled recording of Programs. You can choose to record at the same time daily, weekly or schedule a one off recording.

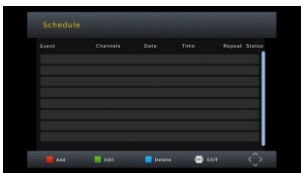

5.7.1 Schedule Event

To add an event, press RED button, the Event Add window will pop up.

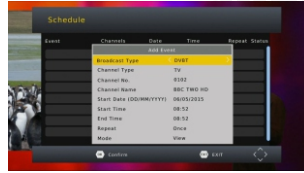

Press <▲> or <▼> to select an item, press <◀> or <▶> to change the settings. Then press <OK> to confirm or press <EXIT> to exit.

5.7.2 Edit Event

To edit an existing event, press <▲> or <▼> to select the event and press GREEN button.

5.7.3 Delete Event

To delete an existing event, press <▲> or <▼> to select the event and press BLUE button. Then press <OK> to confirm or press <EXIT> to cancel.

Press <EXIT> to exit Schedule.

Note: Press the <List> button on the remote control to view a list of recordings.

5.8 Main Menu

Press <MENU> to enter the main menu, press <EXIT> to exit the menu.




In the main menu, press <◀> or <▶> to select between the Channel, Display,

Channel Search, Time, Settings, System or Media Player submenus. Press <OK> to enter a submenu or press <EXIT> to exit the main menu.

In a submenu, press <▲> or <▼> to select an item, then press <OK> or press <◀> or <▶> to change the settings. Press <EXIT> to save the settings and go back to the previous menu.

5.8.1 Channel

The Channel menu allows you to manage channels, access the Electronic Program Guide (EPG), sort channels in different orders and enable or disable Local Channel Numbers (LCN). Here are four items in the Channels submenu, Channel Manager, EPG, Sort and LCN.

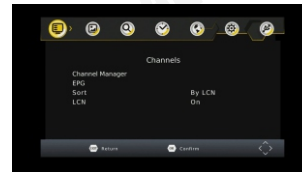

5.8.1.1 Channel Manager

After selecting Channel Manager press <OK> then type in the password to continue. The default password is 000000.



To move a channel, press <▲> or <▼> to highlight the channel and RED button to select it, the 📌 icon will display next to the channel name. Then press <▲> or <▼> to move the channel to the desired position and press <OK> to confirm.

To skip or unskip a channel, press <▲> or <▼> to highlight the channel then press GREEN button. Skipped channels are not found whilst browsing up and down channels and are indicated by the 📌 icon.

To lock or unlock a channel, press <▲> or <▼> to highlight the channel then press YELLOW button, you will be prompted to input your password. Locked channels are indicated by the 🔒 icon.


To delete a channel, press <▲> or <▼> to highlight the channel then press BLUE button. Press <OK> to confirm or press <EXIT> to cancel.

To add a channel to your favourites list, press <▲> or <▼> to highlight the channel then press <FAV>. Select a category from the list and press <OK> to confirm. Press <EXIT> to close the window. Favourite channels are indicated by the ★ icon.




To rename a channel, press <▲> or <▼> to highlight the channel then press <RECALL>.

To use the onscreen keyboard, press <▲>, <▼>, <◀> or <▶> to select a character then press <OK> to confirm.

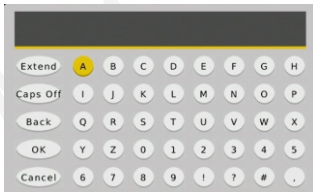

5.8.1.2 EPG

The EPG (Electronic Program Guide) is a schedule of programs due to be broadcast in the next 7 days. Please note that not all channels offer listing information.

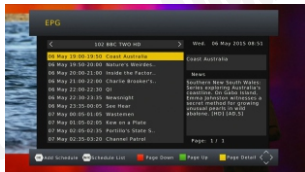

- <▲> or <▼> Browse
- <◀> or <▶> Schedule info.
- Red or Green Page Down or Up
- Yellow Scroll through program description

To schedule recording or viewing, select the program you would like to watch or record and press <OK>. This opens the Schedule Event window. (Please refer to 5.7.1)

Pressing <INFO> whilst in the EPG opens the Schedule window where you can view a list of scheduled events.

5.8.1.3 Sort

Sort can be used to automatically reorder your channels by LCN (logical channel number), ONID (Original Network ID), Service Name and Service ID. Press <◀> or <▶> to select an option.

5.8.1.4 LCN

Press <◀> or <▶> to enable or disable Logical Channel Number.

5.8.2 Display

The Display menu allows you to change aspect ratio, HDMI output resolution and TV format.



5.8.2.1 Aspect Ratio

Press <◀> or <▶> to select between Auto, 4:3, 16:9 aspect ratios.

5.8.2.2 HDMI Output

Press <◀> or <▶> to select between 576i, 576p, 720p, 1080i and 1080p (50Hz) resolution.

5.8.2.3 TV Format

Press <◀> or <▶> to select between PAL and NTSC TV formats.

5.8.3 Channel Search

The Channel Search menu allows you to search for channels and change channel search settings.



5.8.3.1 Auto Search

Select Auto Search and press <OK> to start searching for channels, the selected countries settings will be used.




If no channels are found, the Installation Guide window will be displayed (Please refer 5.1)

Press <EXIT> during the search to stop searching. Press <MENU> during the search to skip the current frequency.

5.8.3.2 Manual Search

Manual Search is used to search for channels on a specific frequency.

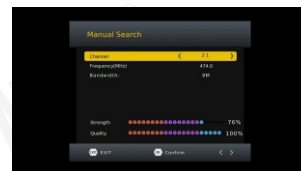

Press <◀> or <▶> to select the desired Frequency and press <OK> to start searching. The selected countries settings will be used.

5.8.3.3 Country

Press <◀> or <▶> to select the countries broadcast settings to use in auto search or manual search.

5.8.3.4 Aerial Power

The device can output 5V power from the coaxial aerial socket, press <◀> or <▶> to select Aerial Power ON if your external aerial takes 5V input via its coaxial plug.

5.8.3.5 Standby Loop Through

The device can provide a loop-through for a second receiver when it is in standby mode. Press <◀> or <▶> to enable or disable this function.

5.8.4 Time

The Time menu allows you to change the system time.



5.8.4.1 Time Offset

Press <◀> or <▶> to select between manual and automatic Time Offset.

5.8.4.2 Time Zone

Press <◀> or <▶> to select a time zone to use for manual time offsetting.

5.8.4.3 Auto Sleep

Press <◀> or <▶> to set the Sleep Timer from 1 to 12 Hour or select Off to disable this function.

5.8.4.4 Power On/Off

Press <◀> or <▶> to Enable Power On or Off and program a wake up and sleep time. Enter desired time in appropriate fields.

5.8.5 Settings

The Settings menu allows you to change language settings for the OSD ,Subtitle and Audio. and select the Digital Audio output mode.



Press <▲> or <▼> to select an item and press <◀> or <▶> to change the language.

Whilst watching TV you can press <AUDIO> or <SUB-T> to access language settings for the audio and subtitles.

To enable the subtitles for all channels, adjust the subtitle language in Language menu to a desired language.

5.8.5.1 Digital Audio

The device provides a Digital Audio Out via coaxial cable. Press <◀> or <▶> to select between PCM, RAW HDMI ON, RAW HDMI OFF and OFF.


5.8.6 System

The System menu allows you to change parental control age and password settings, restore the device to factory default, view system information, update the software and Digital Audio.




5.8.6.1 Parental Control Age

Enter your password to access the Parental Control Age settings then use <◀> or <▶> to select between off, or to specify an age group between 04 and 18.

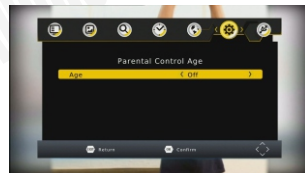


5.8.6.2 Set Password

Enter your current password using the number buttons on the remote control then enter your new password twice. The default password is 000000.

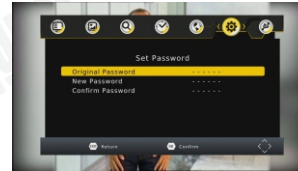

After entering your new password a pop up message will appear. Press <EXIT> to close the pop up message and return to the password menu.

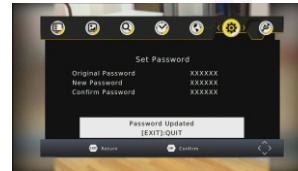

5.8.6.3 Factory Reset


Press <OK> then enter your password and press <OK> to reset the device to factory default settings or press <EXIT> to return to the system menu.



Once the default settings have been restored, the Installation Guide will appear. (Please refer to 5.1)

5.8.6.4 Information

Press <OK> to display information on the device model, current software and hardware version.

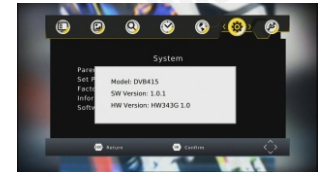

5.8.6.5 Software Update

This function is for manufacturers use only.


5.8.7 Media Player

Media Player allows you to play music, photos, video and PVR files from a USB memory device. The supported formats can be found in chapter 6, Specifications.




5.8.7.1 Media Player (Playback)

In Media player menu Press <▲> or <▼> to select Media Player item, Press <▶> or <OK> to enter media player options and press <◀> or <▶> to select Music, Photo, Video, PVR items. and press <OK> to select player files.

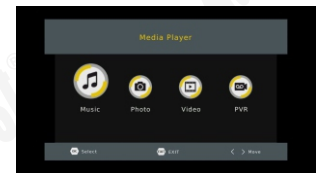


5.8.7.1.1 Music Player

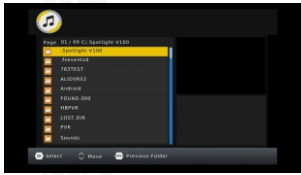

- <▲> or <▼> Select a folder or file
- <OK> Open folder or play a file
- <RECALL> Go back to previous folder
- <REPEAT> Set repeat mode
- <GOTO> Jump to a specific track position
- <EXIT> Exit music player mode

5.8.7.1.2 Photo Player

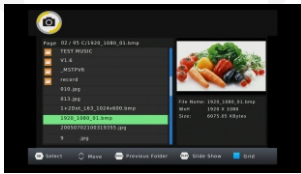


- <▲> or <▼> Select a folder or preview a file
- <OK> Open folder or display a file in full screen
- <RECALL> Go back to previous folder
- <▶▶> Start the slide show
- <REPEAT> Set repeat mode
- <EXIT> Exit the slide show or photo player mode
- <Blue> Switch to grid view
- <Green> or <Yellow> Rotate Image

5.8.7.1.3 Video Player



- <▲> or <▼> Select a folder or file
- <OK> Open folder or preview a file
- <RECALL> Go back to previous folder
- <▶▶> Play/Resume
- <||> Pause
- <◀◀> Rewind
- <▶▶▶> Fast forward
- <▶▶▶▶> Next
- <◀◀◀> Previous
- <Red> Enter or exit full screen
- <REPEAT> Set repeat mode
- <GOTO> Jump to a specific track position
- <EXIT> Exit the movie player mode

5.8.7.1.4 PVR Player

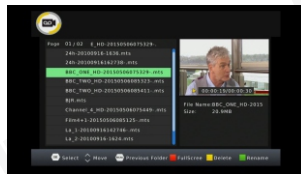


- <▲> or <▼> Select a folder or file
- <OK> Open folder or preview a file
- <RECALL> Go back to previous folder
- <▶▶> Play / Resume
- <||> Pause
- <◀◀> Rewind
- <▶▶▶> Fast forward

- <▶▶▶> Next
- <◀◀◀> Previous
- <Red> Enter or exit full screen
- <REPEAT> Set repeat mode
- <GOTO> Jump to a specific track position
- <EXIT> Exit the movie player mode
- <Green> Rename a file
- <Yellow> Delete a file

5.8.7.2 Photo Settings

Press <▲> or <▼> to select Photo Settings and press <▶▶> or <OK> to Set Photo Settings options.

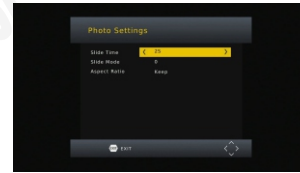

5.8.7.2.1 Slide Time

The duration each picture is displayed for in a slide show. It can be set to between 1 and 8 seconds.

5.8.7.2.2 Slide Mode

Switch slide show mode between sequential and random.

5.8.7.2.3 Aspect Ratio

This is used to control the aspect ratio of pictures in a slide show. There are two options, Original and Screen Fit. Press <EXIT> to return to the main menu.

5.8.7.3 Video Settings

Press <▲> or <▼> to select Video Settings and press <▶▶> or <OK> to set Video Settings options.



5.8.7.3.1 Subtitle Specific

[Small]: Displays the subtitle as small mode.
[Normal]: Displays the subtitle as normal mode.
[Big]: Displays the subtitle as big mode.

5.8.7.3.2 Subtitle BG

[White]: Displays the subtitle in white background.
[Transparent]: Displays the subtitle in transparent background.
[Grey]: Displays the subtitle in grey background.
[Yellowgreen]: Displays the subtitle in yellowgreen background

5.8.7.3.3 Subtitle Font Color

[Red]: Displays Subtitle in red font.
[Blue]: Displays Subtitle in blue font.
[Green]: Displays Subtitle in green font.
Press <EXIT> to return to the main menu.

5.8.7.4 PVR Settings

Press <▲> or <▼> to select PVR Settings and press <▶▶> or <ok> to enter PVR Settings.



Users can select the record device and format the USB memory stick in PVR Configure.


5.8.7.4.1 Record Device

Users can select which disk is used for record and time shift and set the Timeshift Space in Record Device. Press <▲> or <▼> to select an item and press <◀> or <▶> to change the settings.



5.8.7.4.2 Format

Format allows you to format a USB memory device in either FAT32 or NTFS.

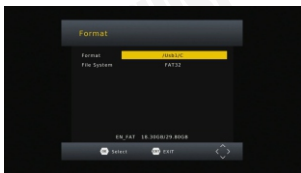

Press <◀> or <▶> to highlight File System then press <◀> or <▶> to select between FAT32 and NTFS. Press <◀> or <▶> to highlight Format and press <OK>. Then press <OK> to begin formatting or press <EXIT> to return to the Format menu.

6. Specifications

DVB-T/T2 Video Decoder	MPEG1/2/4 H.264
DVB-T/T2 Audio Decoder	MP3 WAV AAC
DVB-T/T2 Band	6, 7, 8 MHz
DVB-T/T2 Frequency	VHF: 177.5~227.5 MHz UHF: 474~858 MHz
Video Output	HDMI, SCART
USB Port	USB 2.0 host (5V)
Power Input	AC 220~240V 50/60Hz
Power consumption	< 6 W
Dimensions	150 x 110 x 40 mm
Net Weight	250g

Media Formats

Music	mp3, ac3, aac, wav, wma, ogg
Photo	jpg, jpeg, bmp, png
Movie	avi, mp4, flv, dat, ts, tp, 3gp, mov, trp, mpg, mpeg, mkv, vob

Format USB

- 1) Insert the USB into the Box
- 2) Open up the Menu, and scroll along to 'Media Player'
- 3) Under 'Media Player,' scroll down to 'PVR Settings'
- 4) Under 'PVR Settings,' select 'Format'
- 5) Under 'Format,' switch the format of the USB from 'FAT32' to 'NTFS'

7. Troubleshooting

Problems listed below do not necessarily signify a fault with the unit. Please check this list before requesting repairs.

Problems	Possible Causes and Solutions
No Power	Plug the power cord into the outlet tightly and turn on the device.
No image	Check the connection to the monitor. Check the video output, TV format in Display menu.
No sound	Cancel Mute. Press MUTE button. Increase volume. Press VOL+ button Check the connection to the target audio device. Restore the factory default, then try again.
Picture freezing, and/or sound distorting	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
No signal	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
Remote control does not work	Change the batteries. Operate within normal range. (max 8 meters, 30°) The sensor is pointed to by bright light
Snowstorm	Motors/Trains/High Voltage Lines and Neon Lights may affect the signal.
No recording	No USB memory is connected. No free space on the storage.
'Boot' message appears on the Box, but there is no Installation Guide on the screen	Ensure that you have the correct Input selected on your TV. If possible, please use the provided HDMI Cable and have HDMI Input selected on the TV. Use an alternative HDMI Cable or Scart Cable/Input if necessary.

Warning

This operation instruction is only intended for reference. No further notice is available to any modification of all information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

Warning

No user serviceable components are fitted inside this Receiver. Do not attempt any repairs, as this will invalidate the warranty. Any repairs must be carried out by either the manufacturer or their nominated service centre. Parts inside this set are subject to high voltage.

8. Warranty

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired free of charge (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased
- The product must be correctly installed and operated in accordance with the instructions given in the user's manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main unit, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repairs. The manufacturer disclaims any liability for incidental or consequential damages.
- Please consult our customer service before returning any product; we are not responsible for any unexpected product returns.
- Any faulty products must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Customer Service:

Telephone: +44 (0) 845 250 0586

Email: service@augustint.com

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The Declaration of conformity may be consulted online at <http://www.augustint.com/en/declaration>.

UK
CA

Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.